


Service Manual

ELAR EXTQW FLOOD HP


- ❖ Exploded Diagram
- ❖ Circuit Diagram
- ❖ Wiring Diagram
- ❖ Dimensional Drawing

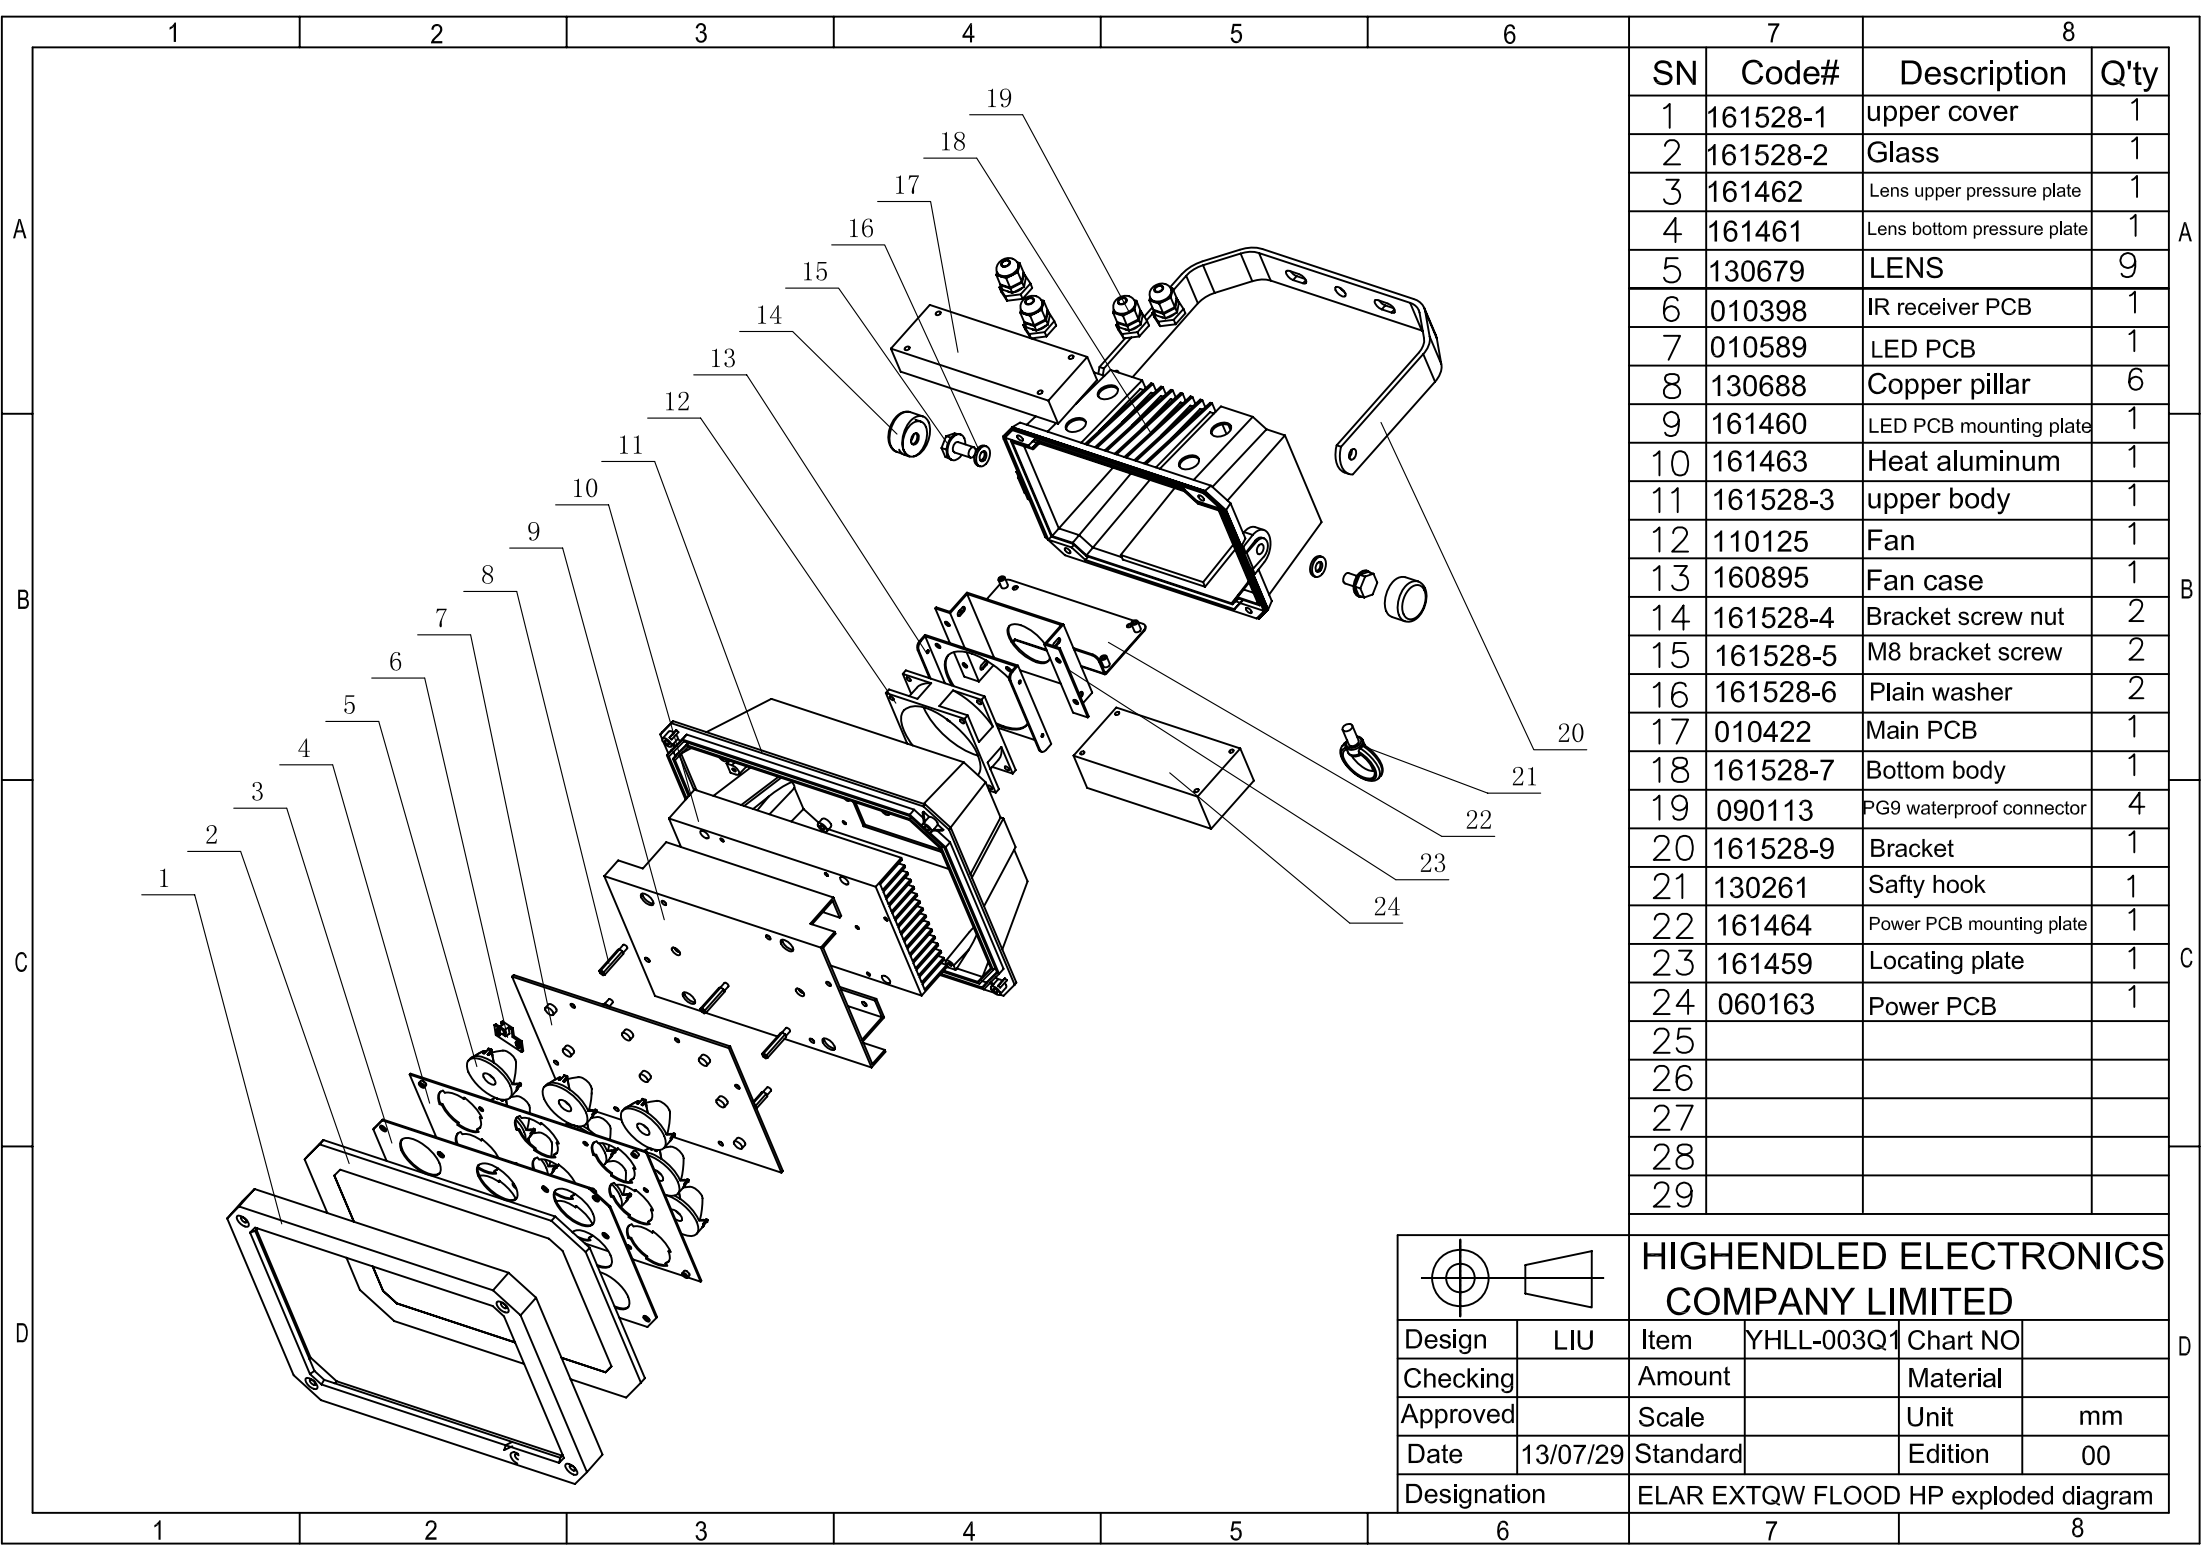


SN	Code#	Description	Q'ty
1	161528-1	upper cover	1
2	161528-2	Glass	1
3	161462	Lens upper pressure plate	1
4	161461	Lens bottom pressure plate	1
5	130679	LENS	9
6	010398	IR receiver PCB	1
7	010589	LED PCB	1
8	130688	Copper pillar	6
9	161460	LED PCB mounting plate	1
10	161463	Heat aluminum	1
11	161528-3	upper body	1
12	110125	Fan	1
13	160895	Fan case	1
14	161528-4	Bracket screw nut	2
15	161528-5	M8 bracket screw	2
16	161528-6	Plain washer	2
17	010422	Main PCB	1
18	161528-7	Bottom body	1
19	090113	PG9 waterproof connector	4
20	161528-9	Bracket	1
21	130261	Safty hook	1
22	161464	Power PCB mounting plate	1
23	161459	Locating plate	1
24	060163	Power PCB	1
25			
26			
27			
28			
29			

**HIGHENDLED ELECTRONICS
COMPANY LIMITED**

Design	LIU	Item	YHLL-003Q1	Chart NO	
Checking		Amount		Material	
Approved		Scale		Unit	mm
Date	13/07/29	Standard		Edition	00
Designation	ELAR EXTQW FLOOD HP exploded diagram				

 

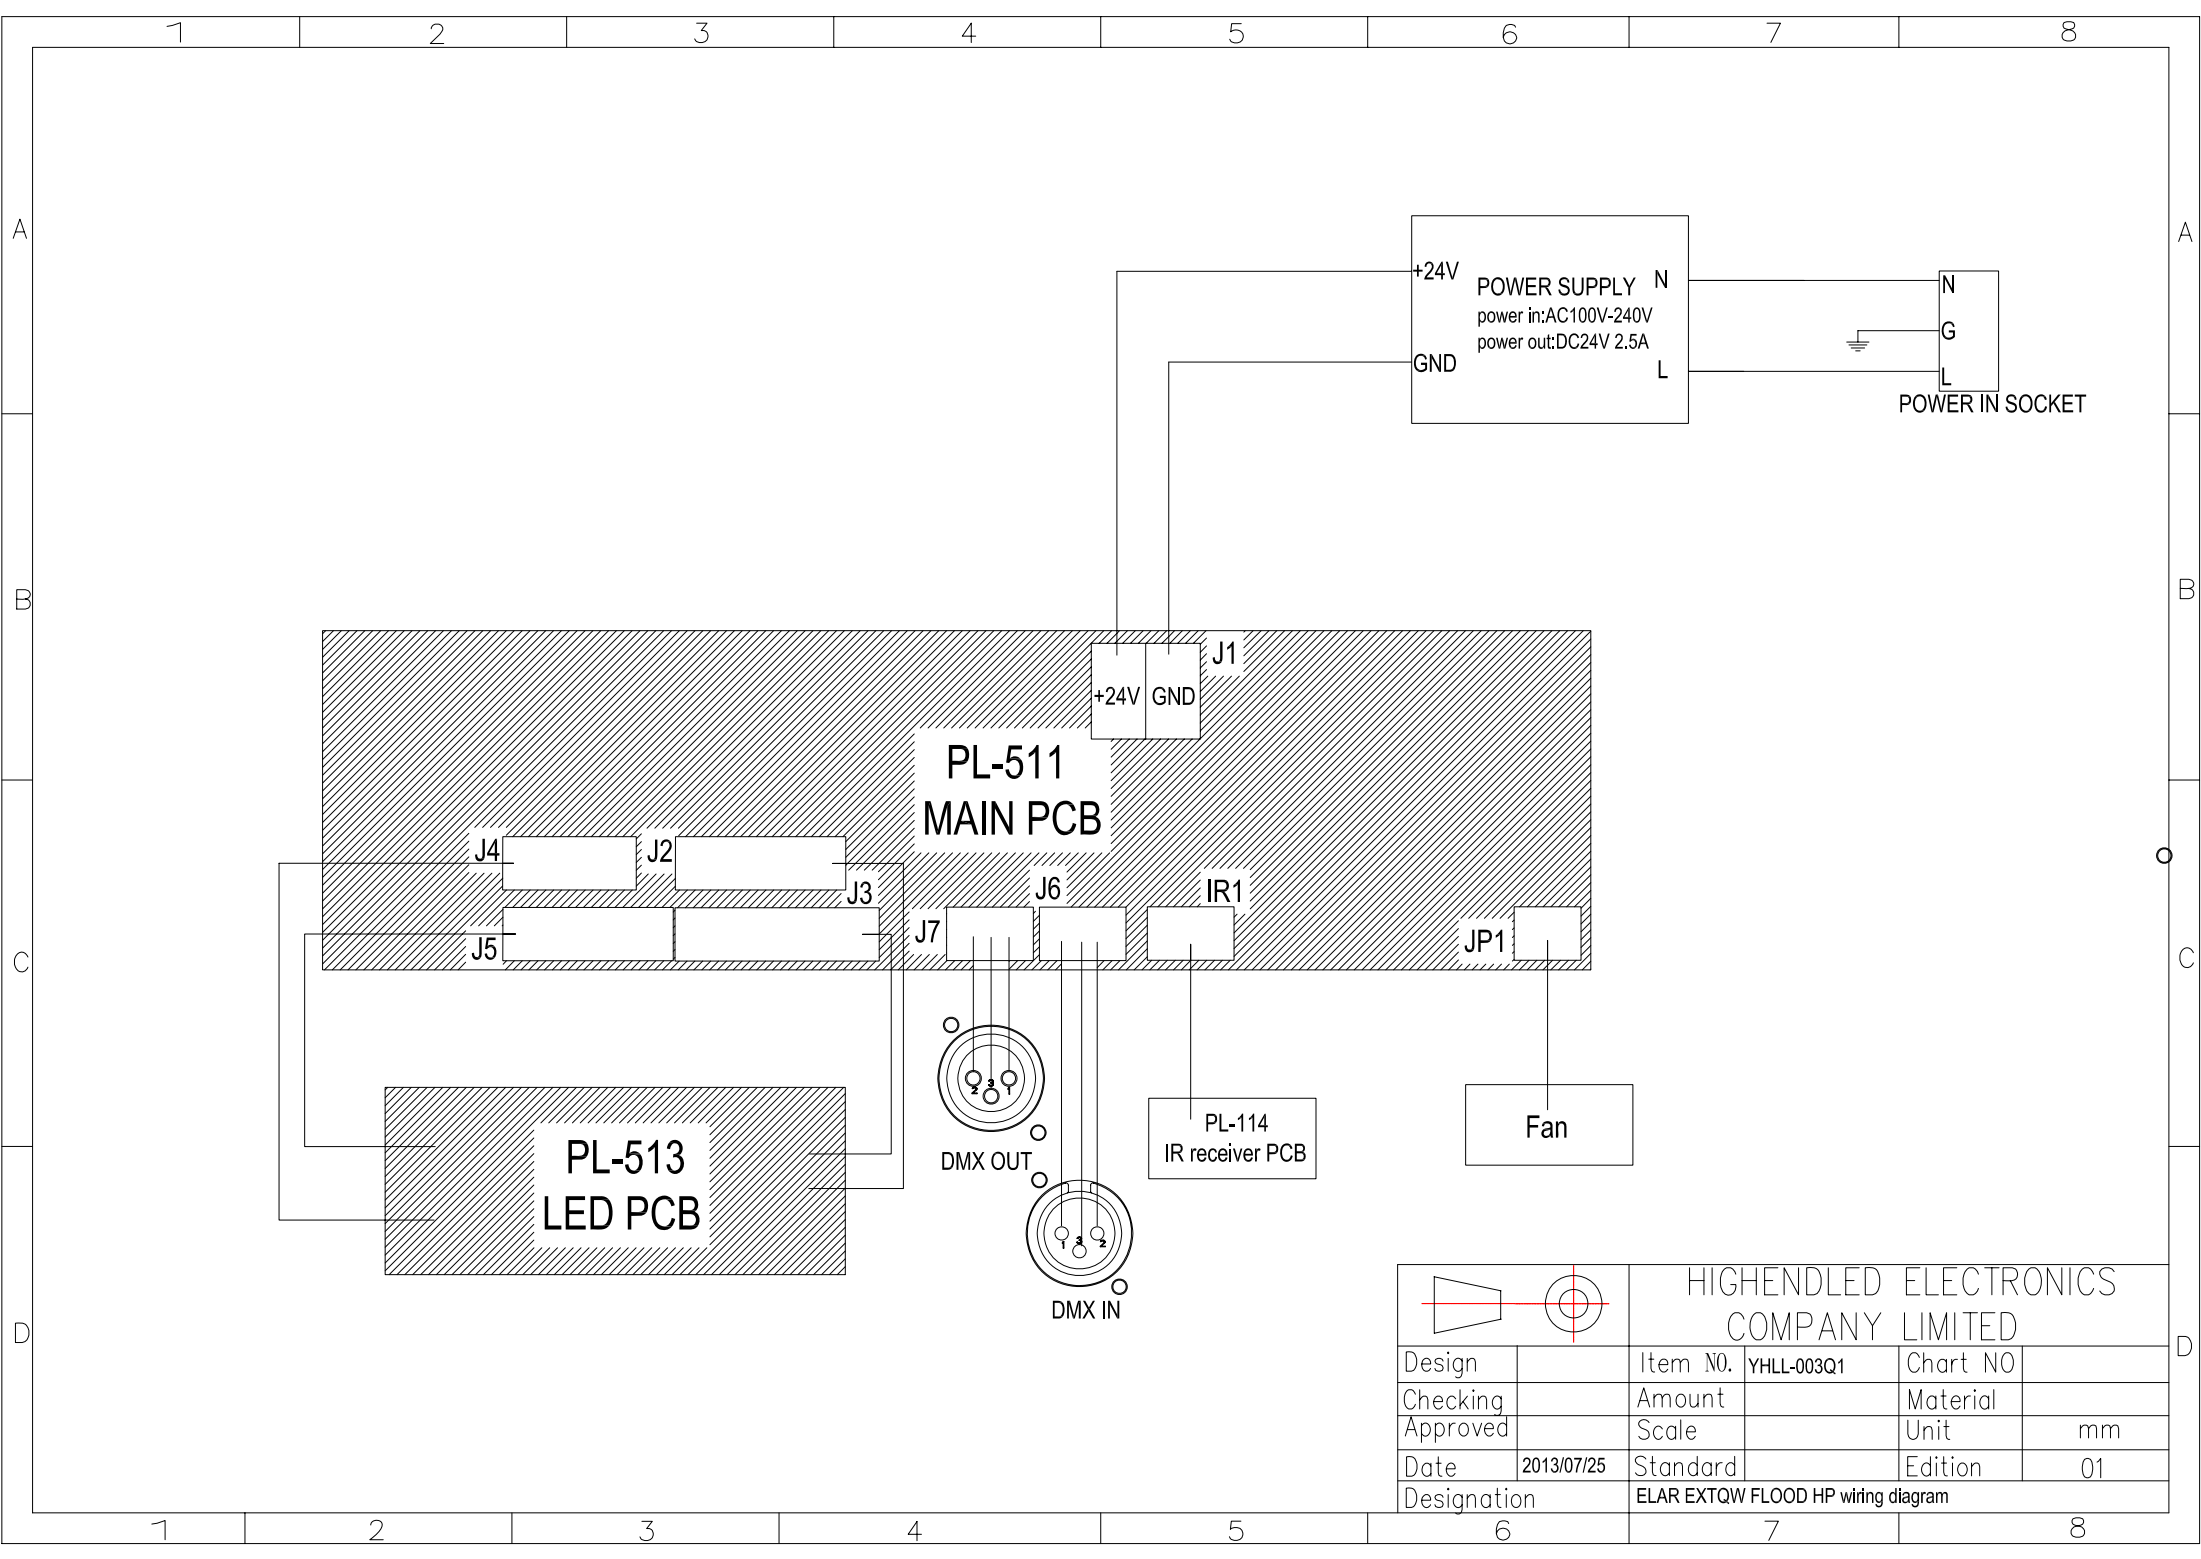

 HIGHENDEDLED ELECTRONICS COMPANY LIMITED					
Design		Item NO.	YHLL-003Q1	Chart NO	
Checking		Amount		Material	
Approved		Scale		Unit	mm
Date	2013/07/25	Standard		Edition	01
Designation	ELAR EXTQW FLOOD HP wiring diagram				

