Studio Spot® 575 CMY/CMY Zoom Menu Map

Level 1	Level 2	Level 3	Level 4	Options/ Display Range	Description
AddR	<u> </u>			F### C###	Change existing Fixture number or DMX start channel (Menu option selected in INFO/DMx/FIxT/SRCE)
	LAMP			LON LOFF STRK	DIsplays Lamp State as ON, OFF or attempting to STRIKE.
	L/HR			####	Displays current lamp hours ## and minutes ##
	L/ST			####	Displays number of lamp strikes
	VER			####	Displays fixture's software version
	L/RS			HOLd-0000	Press and hold the <enter> button until the display shows "0000" to reset lamp hours to zero</enter>
	F/HR			H### M ##	Displays total hours and minutes the fixture has run
	F/RS			HOLd 0000	Press and hold the <enter> button until the display shows "0000" to reset fixture hours to zero</enter>
		CURR		###C	Displays current internal temperature in centigrade
		MINT		###C	Displays minimum internal temperature in centigrade
	TEMP	MAxT		###C	Displays maximum internal temperature in centigrade
		RST		HOLd 0000	Press and hold the <enter> button until the display shows "0000" to reset min and max temp to zero</enter>
			ERRS	####	Displays DMX errors
			CNTL	0001-0255	Displays Control channel DMX value
			MACR	0001-0255	Displays Macro DMX value
			MSPd	0001-0255	Displays MSpeed DMX value
			dIM	0001-0255	Displays Dim DMX value
INFO			SHUT	0001-0255	Displays Shutter DMX value
			IRIS	0001-0255	Displays Iris DMX value
			FCUS	0001-0255	Displays Focus DMX value
	dMx		FRST	0001-0255	Displays Frost DMX value (Zoom value in models with zoom lens)
			LR2L	0001-0255	Displays Litho wheel 2 rotation DMX value (low byte)
			LR2H	0001-0255	Displays Litho wheel 2 rotation DMX value (high byte)
		FIxT	LT2	0001-0255	Displays Litho wheel 2 aperture position DMX value
			LTC2	0001-0255	Displays Litho wheel 2 control channel DMX value
			LR1L	0001-0255	Displays Litho wheel 1 rotation DMX value (low byte)
			LR1H	0001-0255	Displays Litho wheel 1 rotation DMX value (high byte)
			LT1	0001-0255	Displays Litho wheel 1 aperture position DMX value
			LTC1	0001-0255	Displays Litho wheel 1 control channel DMX value
			YELW	0001-0255	Displays Yellow channel DMX value
			MAGN CYAN	0001-0255 0001-0255	Displays Magenta channel DMX value
			COLC	0001-0255	Displays Cyan channel DMX value Displays Color Control channel DMX value
			TLTL	0001-0255	Displays Tilt DMX value (low byte)
			TLTH	0001-0255	Displays Tilt DMX value (low byte)
			PANL	0001-0255	Displays Pan DMX value (low byte)
			PANH	0001-0255	Displays Pan DMX value (high byte)
			STRT	0001-0255	Displays Start code

Level 1	Level 2	Level 3	Level 4	Options/ Display Range	Description
			CE		Not used
		FIXT	SRCE	LINK PRST	Indicates the fixture data source
	dMx (cont.)	(cont.)	OV	####	Displays overrun errors
	(00/111)		FE	####	Displays framing errors
		dATA	C001 - C512	0001-0255	Displays current DMX value of the selected Channel
		PPOS		####	Checks that the pan encoder is functioning (A working encoder will change value in the display as the pan position of fixture head is manually changed)
INFO (cont.)		TPOS		####	Checks that the tilt encoder is functioning (A working encoder will change value in the display as the pan position of fixture head is manually changed)
(com:)		SENP		ON OFF	Displays pan homing tab sensor status
	SENS	SENT		ON OFF	Displays tilt homing tab sensor status
		COL		ON OFF	Displays color wheel homing tab sensor status
		LT1		ON OFF	Displays litho wheel 1 homing tab sensor status
		LT2		ON OFF	Displays the litho wheel 2 homing tab sensor status
		SVCC		ON OFF	Displays power- to-sensor status
	HOME				Initiates a sequence that homes the fixture
	ENCd			ON	Turns on power to the encoders
				OFF	Disables the encoders for servicing
	S/UP SET NOW				Places the fixture in setup mode for mechanical homing. (Press menu button to exit.)
				ALL	Tests all constructs
				PAN	Tests shutter strobe movement
				TILT	Tests iris movement
	SELF CO			CO1	Tests focus lens movement
				CO2	Tests frost flag (Tests lens in models with Zoom option)
				LT1	Tests litho wheel 2 rotation
TEST	automatio			LT2	Tests litho wheel 1 rotation
	to perform	n tests.		FTST	Tests litho wheel 2 movement
				FCUS IRIS	Tests litho wheel 1 movement
				SHUT	Tests color mixing wheel pair 2 movement Tests color mixing wheel pair 2 movement
				dIM	Tests color mixing wheel pair 2 movement Tests color mixing wheel pair 1 movement
	bOOT			или	Reboots the fixture
	LAMP	STAT		ON OFF	Displays the current lamp status
		LOFF			Extinguishes the lamp
		LON			Strikes the lamp
	dISP				Tests the alphanumeric LED display
					Crossloads fixture software to all other Studio 575 Series fixtures
	xLd				on the link
MOdE				COLR	Identifies the fixture as a Studio Color 575
	TYPE			SPOT	Identifies the fixture as a Studio Spot 575 (Zoom and CMY features are automatically detected)

Level 1	Level 2	Level 3	Level 4	Options/ Display Range	Description
	FACT			ON	Sets factory defaults on
	FACT			OFF	Current settings are overriding factory defaults
	LENS			NORM	Selects Standard lens option
				ZOOM	Selects Zoom lens option
	dLOS			SHRT	Shuts fixture down 3 minutes after DMX data loss
	ULUS			LONG	Shuts fixture down 1 second after DMX data loss
	CHNL			AddR	Sets the Addressing method to fixture number
	CITIVL			dMx	Sets the Addressing method to DMX start channel
	dSPL			ON	Turns the display on
				OFF	Turns the display off
				dIM	Dims the display
	d/IN			ON	Selecting ON inverts the alphanumeric display orientation
SET				OFF	Selecting ON inverts the alphanument display offentation
	D/INI			ON	Selecting ON inverts pan movment direction
	P/IN			OFF	Selecting ON inverts pair movinent direction
	T/IN			ON	Selecting ON inverts tilt movement direction
	17111			OFF	Selecting ON inverts the movement direction
	SWAP			ON	Calcating ON aware non and tilt mayament
				OFF	Selecting ON swaps pan and tilt movement
	S/dN			5 MN	Sets shutdown time at 5 minutes
	S/UN			10 MN	Sets shutdown time at 10 minutes
	COdE			•	FACTORY USE ONLY
				FAST	
	CMY			MEd	Selects the speed of CMY changes. Factory default is slow.
				SLOW	
	PLAY			ON	Starts playback
				OFF	Stops playback
				SCN	Displays which scene is playing
	SEND			OK?	Crossloads all presets to other Studio Spot fixtures on the link.
	dFLT			OK?	Enables the factory-programmed preset scene sequence (self-demo) / erases any preset scenes previously programmed
	CAPT			SN01-SN16	Captures a snapshot of DMX data being received and stores it in the selected scene.
	CODY	FROM		F00-F16	Selects a scene to copy from (source scene)
	COPY	TO		T00-T16	Selects a scene to copy to (destination scene)
				OPEN	Fully opens the shutter
	EdIT	SN01- SN16	SHUT	CLSd	Closes the shutter
PRST				P 01-P 32	Strobes the shutter at specified periodic intervals from slow (P 01) to fast (P 32)
				N 01-N 32	Strobes the shutter at random intervals from slow(N 01) to fast (N 32)
				RS01-RS32	Snaps shutter open, ramps shut slow (RS01) to fast (RS32)
				SR01-SR32	Ramps shutter open from slow (SR01) to fast (SR32), then snaps shutter closed
				NS01-NS32	Snaps shutter open randomly, then ramps closed from slow (NS01) to fast (NS32)
				NR0-NR32	Ramps shutter ramp open randomly, from slow (NR01) to fast (NR32), then snaps shutter closed
			dIM	d000-d255	Selects a dim value from dark (d000) to bright (d255)
			PAN	-185-+185	Selects a pan value
<u></u>		<u> </u>	TILT	-112-+112	Selects a tilt value

Level 1	Level 2	Level 3	Level 4	Options/ Display Range	Description
				CON	Positions the color wheels in continuously-variable, Full speed mode
			COLC	MCON	Positions the color wheels in continuously-variable Mspeed mode
				Tbd	To be Determined - Reserved for future use
				MTbd	To be Determined - Reserved for future use
			CYAN	0 - 255	Selects cyan value from full (0) to open white (255)
			MAGN	0 - 255	Selects magenta value from full (0) to open white (255)
			YELW	0 - 255	Select yellow value from full (0) to open white (255)
				ldx	Snaps to selected aperture position at Full Speed
				FSP	Spins Litho wheel forward at a variable speed.
				RSP	Spins Litho wheel in reverse at a variable speed.
				WSP	Litho Wheel 1 rotates continually (0-360°).
				FSC	Fast scaning one full position on each side of the selected litho) at Full Speed.
				RNd	Variable-speed random aperture position selection.
			LTC1	bKW	Closes dim flags between aperture position changes.
			(litho wheel 1	bKA	Closes dim flags between aperture rotation changes.
			control)	Mldx	Same as Idx with MSpeed
				MFSP	Same as FSP with MSpeed
				MRSP	Same as RSP with MSpeed
				MWSP	Same as WSP with Mspeed
				MFSC	Same as FSC with MSpeed
				MRNd	Same as Rnd with MSpeed
		SN01- SN16 (cont.)		MbKW	Same as bKW with MSpeed
PRST (cont.)	EdIT (cont.)			MbKA	Same as bKA with MSpeed
(com.)	(COIII.)		LT1 (litho wheel 1 position)	L1-L6	Selects litho position 1 - 6 at full or Mspeed (LTC1=Idx or MIdx)
				LF1-LF6	Sets forward wheel spin speed from stop–fast at full speed or Mspeed (LTC1=FSP or MFSP)
				LR1-LR6	Sets reverse wheel spin speeds from slow–fast (LTC1= RSP or MRSP)
				SC1-SC6	Selects litho position from 1-6 to scan at full or Mspeed. (LTC1= FSC or MFSC)
				bW1-bW6	Selects litho position with blink between position change or aperture rotation change at full speed or Mspeed. (LTC1= FSP, WFSP, WSP, or MWSP)
				RANd	A litho position cannot be assigned when LTC1 = RNd
				WSPN	A litho position cannot be assigned when LTC1 = WSP
			LTR1 (litho wheel1 rotation)	d000-d358	Rotates a selected aperture to a position from 0 to 360° at full speed or Mspeed (LTC1 = Idx, bKW, bKA, MIdx, MbKW, or MbKA)
				F000-F255	Set forward aperture rotation speed from stop (F000) to fast (F255) at full speed or Mspeed (LTC1=FSP or MFSP)
				R000- R255	Set reverse aperture rotation speed from stop (R000) to fast (R255) at full speed or Mspeed (LTC1=RSP or MRSP)
				S000-S255	Sets fast scan speed from slow (S000) to fast (S255) to fast at full speed or Mspeed (LTC1=FSC or MRNd)
				N000-N255	Sets a pause time between random litho selections from stop (N000) to fast (N255) (LTC1= RNd or MRNd)
				WF01-WF99	Sets wheel spin speed forward slow (WF01) to fast (WF99) at full speed or Mspeed (LTC1= WSP or MWSP)
				WR01-WR99	Sets a litho wheel reverse spin speed from slow (WR01) to fast (WR99) at full speed or Mspeed (LTC1 = WSP or MWSP)

Level 1	Level 2	Level 3	Level 4	Options/ Display Range	Description
				ldx	Snaps to selected aperture position at Full Speed
				FSP	Spins Litho wheel forward at a variable speed.
				RSP	Spins Litho wheel in reverse at a variable speed.
				WSP	Litho Wheel 1 rotates continually (0-360°).
				FSC	Fast scaning one full position on each side of the selected litho) at Full Speed.
				RNd	Variable-speed random aperture position selection.
			LTC2 (Litho wheel 2	bKW	Closes dim flags between aperture position changes.
				bKA	Closes dim flags between aperture rotation changes.
			Control)	Mldx	Same as Idx with MSpeed
				MFSP	Same as FSP with MSpeed
				MRSP	Same as RSP with MSpeed
				MWSP	Same as WSP with Mspeed
				MFSC	Same as FSC with MSpeed
				MRNd	Same as Rnd with MSpeed
				MbKW	Same as bKW with MSpeed
		SN01 - SN16 (cont.)		MbKA	Same as bKA with MSpeed
				L1-L6	Selects litho position 1 - 6 at full or Mspeed (LTC2=ldx or Mldx)
			LT2 (litho wheel 2 position, cont.)	LF1-LF6	Sets forward wheel spin speed from stop–fast at full speed or Mspeed (LTC2=FSP or MFSP)
				LR1-LR6	Sets reverse wheel spin speeds from slow–fast (LTC2= RSP or MRSP)
				SC1-SC6	Selects litho position from 1-6 to scan at full or Mspeed. (LTC2= FSC or MFSC)
PRST (cont.)				bW1-bW6	Selects litho position with blink between position change or aperture rotation change at full speed or Mspeed. (LTC2= FSP, WFSP, WSP, or MWSP)
,				RANd	A litho position cannot be assigned when LTC2 = RNd
				WSPN	A litho position cannot be assigned when LTC2 = WSP
			LTR2 (litho wheel2 rotation)	d000 -d358	Rotates a selected aperture to a position from 0 to 360° at full speed or Mspeed (LTC2 = ldx, bKW, bKA, Mldx, MbKW, or MbKA)
				F000 - F255	Set forward aperture rotation speed from stop (F000) to fast (F255) at full speed or Mspeed (LTC2=FSP or MFSP)
				R000 - R255	Set reverse aperture rotation speed from stop (R000) to fast (R255) at full speed or Mspeed (LTC21=RSP or MRSP)
				S000 -S255	Sets fast scan speed from slow (S000) to fast (S255) to fast at full speed or Mspeed (LTC2=FSC or MRNd)
				N000 -N255	Sets a pause time between random litho selections from stop (N000) to fast (N255) (LTC2= RNd or MRNd)
				WF01 -WF99	Sets wheel spin speed forward slow (WF01) to fast (WF99) at full speed or Mspeed (LTC2= WSP or MWSP)
				WR01 -WR99	Sets a litho wheel reverse spin speed from slow (WR01) to fast (WR99) at full speed or Mspeed (LTC2 = WSP or MWSP)
			FCUS	0 - 255	Adjusts focus (Sets Zoom in fixtures with Zoom lens)
			IRIS	OPEN 5107	Opens iris fully
				F001 - F127	Adjusts iris
				P1 - P15	Sets periodic strobe speed effect
				R1 - R15	Selects random strobe speed effect
				RS1 - RS15	Ramps iris open and Ramps shut
				SR1 - SR15	Snaps iris open and Ramps shut
				NR1 - NR15 NS1 - NS15	Ramps iris open randomly and snaps shut
				1491 - 11919	Snaps iris open and ramps shut

Level 1	Level 2	Level 3	Level 4	Options/ Display Range	Description
	EdIT (cont.)	SN01 - SN16 (cont.)	MSPd	0.15 - 252.7	Selects an MSpeed value in decimal seconds from fast (0.15) to slow (252.7)
			MACR	MROF	Sets the macro option off
				MR01 - MR8	Selects a factory-programmed macro from 1 to 8
PRST			xFAd	x0.1 - x9.9	Selects the dIM and FCUS construct's crossfade time in increments of 0.1
				x10 - x166	Selects the dIM and FCUS construct's crossfade time in increments of 1.0
			dLAY	x0.1 - x9.9	Selects the scene delay time in increments of 0.1
(cont.)				x10 - x166	Selects the scene delay time in increments of 1.0
			TIME	SEC	Selects seconds as the units of time used for the xFAd and dLAY constructs
				MIN	Selects minutes as the units of time used for the xFAd and dLAY constructs
				HOUR	Selects hours as the units of time used for the xFAd and dLAY constructs
			ZERO	OK?	Erases any programming of the current scene by voiding all construct values / mark the end of a loop