


△ A △ B △ C △ D △ E △

1  
△  
2  
△  
3  
△  
4  
△  
5  
△  
6  
△  
7  
△  
8

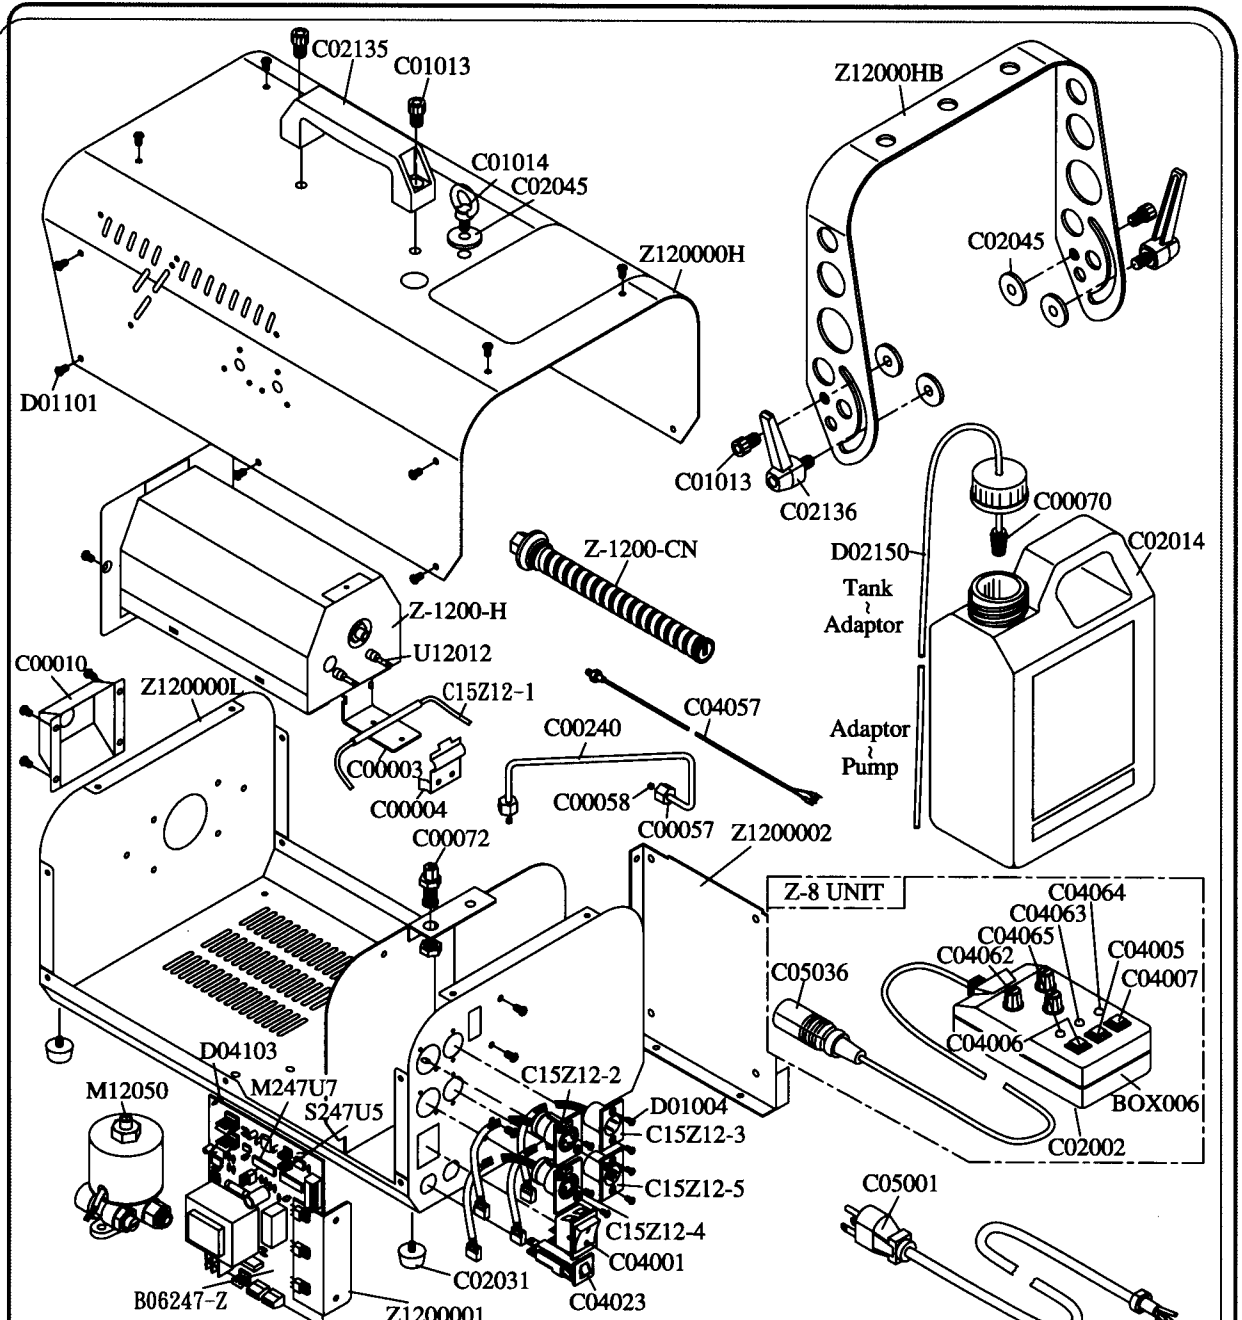

**SPARE PARTS OF Z-1200 (120V)**

- Z120000L Steel Case/Base
- Z120000H Steel Case/Cover
- Z12000HB Yoke
- Z1200001 Aluminum Plate
- Z1200002 Binder
- BOX006 Control Case
- B06247-Z P.C Board(not include IC)
- M247U7 IC(optional)
- S247U5 IC(optional)
- C00003 Trestle
- C00004 Buckle
- C00010 Nozzle Plate
- C00057 Copper Nut
- C00058 Copper Nut Insert
- C00070 Filter
- C00072 Adaptor
- C00240 Copper Tube
- C01013 M8x12L Screw

- C01014 M8 Screw
- C02002 Magnetized Rubber
- C02014 Tank & Tank's cap
- C02031 Foot
- C02045 Washer
- C02135 Handle
- C02136 Tightening Screw
- C04001 Rocker Switch/Power
- C04005 Continuous Switch/Red
- C04006 Timer Switch/Yellow
- C04007 Manual Switch/Green
- C04023 Breaker (120V/13A)
- C04057 Temperature Senser
- C04062 Knob
- C04063 Pilot Lamp/Red
- C04064 Pilot Lamp/Green
- C04065 Pilot Lamp/Yellow

- C05001 Cable & Plug
- C05036 Cable For Remote Control 4Pin(XLR)
- C15Z12-1 Temperature Fuse
- C15Z12-2 Control Outlet Socket 3Pin(XLR)
- C15Z12-3 Control Inlet Socket 3Pin(XLR)
- C15Z12-4 Control Outlet Socket 4Pin(XLR)
- C15Z12-5 Control Inlet Socket 4Pin(XLR)
- D01004 M3x8L Screw
- D01101 M4x8L Screw
- D02150 Pu Tube (φ4)
- D04103 P.C.B Fastening Pin
- M12050 Pump
- U12012 Heater Element
- Z-1200-H Heater (Assembly)
- Z-1200-CN Heater Core
- Z-8 UNIT Wired Remote controller

Antari Lighting And Effects Ltd.