


A B C D E

1
2
3
4
5
6
7
8

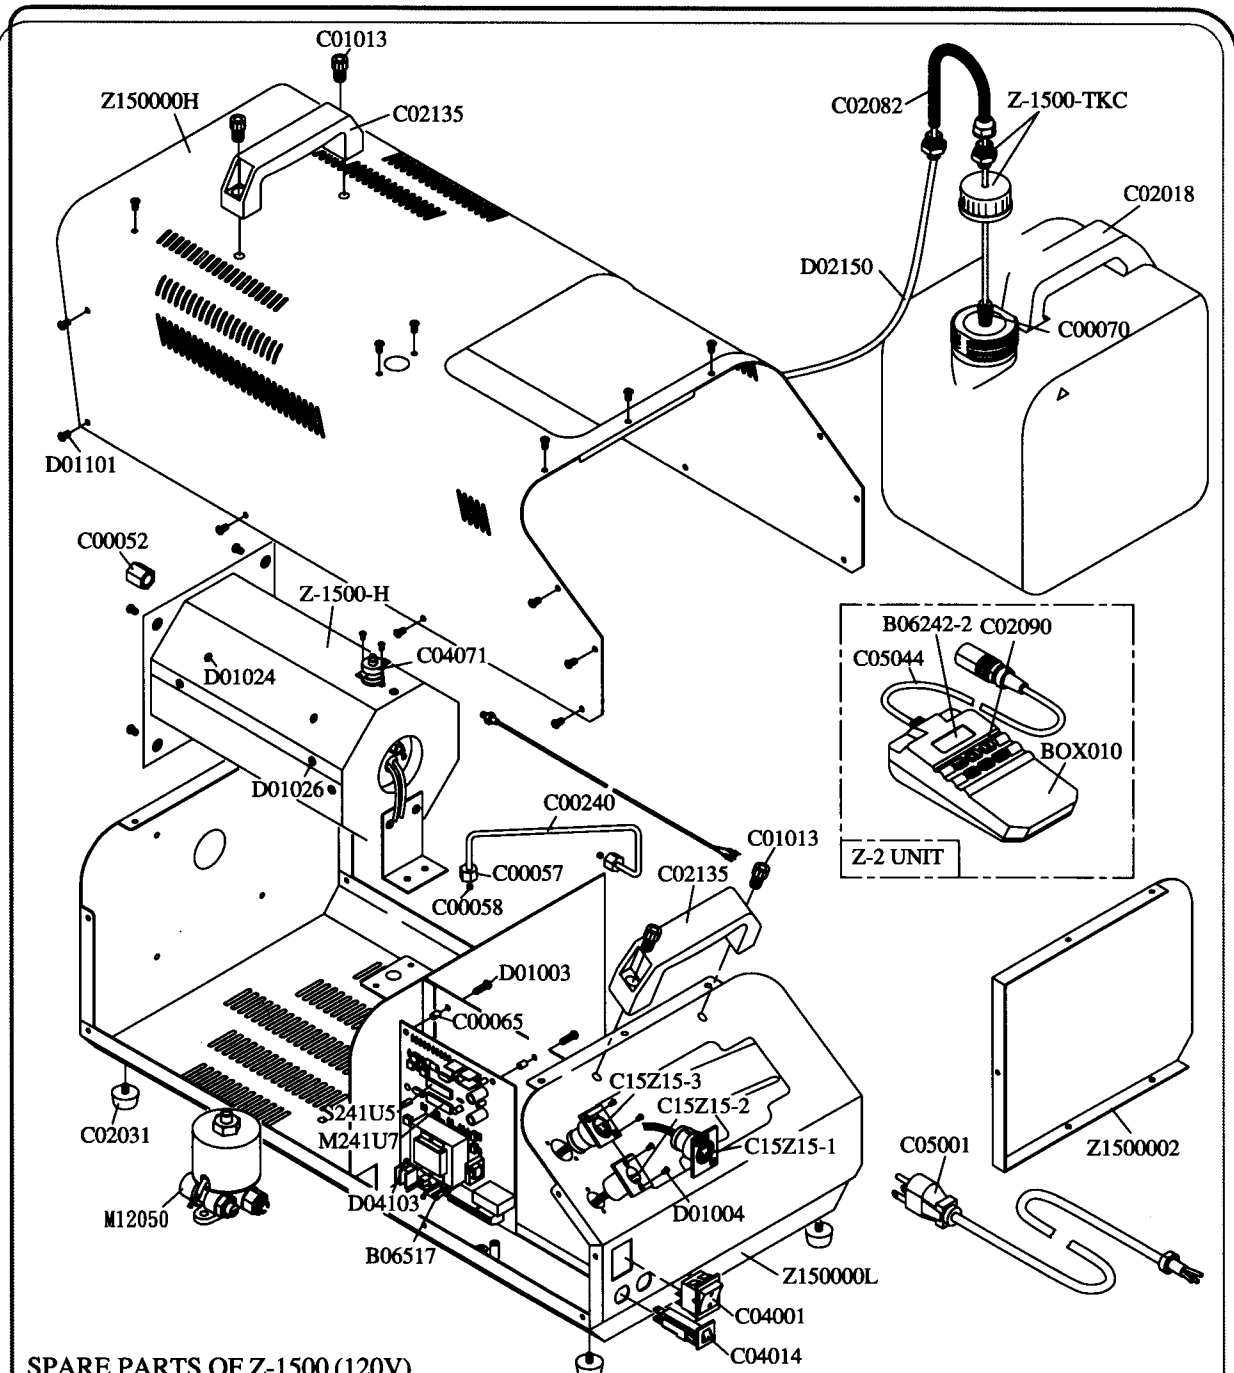

SPARE PARTS OF Z-1500 (120V)

Z150000L	Steel Case/Base	C01013	M8x12L Screw	C15Z15-2	Control Outlet Socket (3Pin)
Z150000H	Steel Case/Cover	C02018	Tank	C15Z15-3	Control Inlet Socket (3Pin)
Z1500002	Separate Plate	C02031	Foot	D01003	M4x12L Screw
B06517	P.C Board DMX(not include IC)	C02082	Plastic Corrugated Pipes	D01004	M3x8L Screw
B06242-2	P.C Board (Z-2)	Z-1500-TKC	Plastic Corrugated Pipe Fittings	D01024	M4x18L Screw
M241U7	IC(optional)	C02090	Rubber Keypad	D01026	M4x8L Screw
S241U5	IC(optional)	C02135	Handle	D01101	M4x8L Screw
BOX010	Controller Case	C04001	Rocker Switch/Power	D02150	Pu Tube o4
C00052	Nozzle	C04014	Breaker (120V/15A)	D04103	P.C.B Fastening Pin
C00057	Copper Nut	C04071	Manual Resettable Thermo-fuse	M12050	Pump
C00058	Copper Nut Insert	C05001	Cable & Plug	Z-1500-H	Heater (group)
C00065	P.C.B Fastening Screw Collar	C05044	Cable For Remote Control 5Pin(XLR)	Z-2 UNIT	Wired Remote Controller
C00070	Filter	C15Z15-1	Control Inlet Socket (5Pin)		
C00240	Copper Tube				

Antari Lighting And Effects Ltd.