

| DMX channel functions and their values: | | | | | | |
|---|-----|-----|---------|------|-----------------------------------|------------------------------|
| Mode/Channel | | | | | Value | Function |
| 3CH | 4CH | 6CH | 12CH | 15CH | | |
| 1 | 1 | 1 | | | 0-255 | Red (0-Black, 255-100%) |
| 2 | 2 | 2 | | | 0-255 | Green (0-Black, 255-100%) |
| 3 | 3 | 3 | | | 0-255 | Blue (0-Black, 255-100%) |
| | | 4 | | 13 | 0-10 | No function |
| | | | 11-40 | | Internal program 1 | |
| | | | 41-70 | | Internal program 2 | |
| | | | 71-100 | | Internal program 3 | |
| | | | 101-130 | | Internal program 4 | |
| | | | 131-160 | | Internal program 5 | |
| | | | 161-190 | | Internal program 6 | |
| | | | 191-220 | | Internal program 7 | |
| | | | 221-255 | | Internal program 8 | |
| | | | 1 | 1 | 0-255 | Red (group1) |
| | | | 2 | 2 | 0-255 | Green (group1) |
| | | | 3 | 3 | 0-255 | Blue (group1) |
| | | | 4 | 4 | 0-255 | Red (group2) |
| | | | 5 | 5 | 0-255 | Green (group2) |
| | | | 6 | 6 | 0-255 | Blue (group2) |
| | | | 7 | 7 | 0-255 | Red (group3) |
| | | | 8 | 8 | 0-255 | Green (group3) |
| | | | 9 | 9 | 0-255 | Blue (group3) |
| | | | 10 | 10 | 0-255 | Red (group4) |
| | | | 11 | 11 | 0-255 | Green (group4) |
| | | | 12 | 12 | 0-255 | Blue (group4) |
| | | 5 | | 14 | 0 | No function (shutter open) |
| | | | 1-95 | | Strobe effect slow to fast | |
| | | | 96-127 | | No function (shutter open) | |
| | | | 128-159 | | Pulse-effect in sequences | |
| | | | 160-191 | | No function (shutter open) | |
| | | | 192-223 | | Random strobe effect slow to fast | |
| | | | 224-255 | | No function (shutter open) | |
| | 4 | 6 | | 15 | 0-255 | Dimming (0-Black, 255- 100%) |