

ACL PAR 200TM

user manual



©2015 ELATION PROFESSIONAL all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ELATION PROFESSIONAL logo and identifying product names and numbers herein are trademarks of ELATION PROFESSIONAL. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ELATION brands and product names are trademarks or registered trademarks of their respective companies.

ELATION PROFESSIONAL and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

Elation Professional USA | 6122 S. Eastern Ave. | Los Angeles, CA. 90040

323-582-3322 | 323-832-9142 fax | www.elationlighting.com | info@elationlighting.com

Elation Professional B.V. | Junostraat 2 | 6468 EW Kerkrade, The Netherlands

+31 45 546 85 66 | +31 45 546 85 96 fax | www.elationlighting.eu | info@elationlighting.eu

DOCUMENT VERSION

Please check www.elationlighting.com for the latest revision/update of this manual.

Date	Document Version	Software Version	DMX Channel Modes	Notes
9/8/15	1	≥1.06	4CH1:04 / 4CH2:04 / 6 / 8 / 10 / 12 / 27 / 28 / 30 / 32 / 35	Initial release.



CONTENTS

General Information	4
Warranty	6
Safety Instructions	7
General Guidelines	8
Fixture Overview	9
Fixture Installation	10
Fixture Menu	12
DMX Channel Functions And Values	15
Cleaning and Maintenance	20
Technical Specifications	21
Optional Accessories	23



GENERAL INFORMATION

INTRODUCTION

Congratulations, you have just purchased one of the most innovative and reliable lighting fixtures on the market today! This fixture has been designed to perform reliably for years when the guidelines in this booklet are followed. Please read and understand the instructions in this manual carefully and thoroughly before attempting to operate this unit. These instructions contain important information regarding safety during use and maintenance.

UNPACKING

Every fixture has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your unit for damage and be sure all accessories necessary to operate the unit have arrived intact. In the event damage has been found or parts are missing, please contact our customer support team for further instructions. Please do not return this unit to your dealer without first contacting customer support at the number listed below. Please do not discard the shipping carton in the trash. Please recycle whenever possible.

BOX CONTENTS

- (1) powerCON Cable
- Manual & Warranty Card



CUSTOMER SUPPORT

Elation Professional® provides a customer support line, to provide set up help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at <u>www.elationlighting.com</u> for any comments or suggestions. For service related issue please contact Elation Professional®.

ELATION SERVICE USA - Monday - Friday 8:00am to 5:00pm PSTVoice: 323-582-3322Fax: 323-832-9142

E-mail: support@elationlighting.com

 ELATION SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET

 Voice: +31 45 546 85 30
 Fax: +31 45 546 85 96

 E-mail: support@elationlighting.eu

WARRANTY REGISTRATION

Please complete and mail in the enclosed warranty card or register online: http://www.elationlighting.com/Login.aspx to validate your purchase. All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. The R.A. number must be clearly written on the outside of the return package. A brief description of the problem as well as the R.A. number must also be written down on a piece of paper and included in the shipping container. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. Items returned without a R.A. number clearly marked on the outside of the package will be refused and returned at customer's expense. You may obtain a R.A. number by contacting customer support.

IMPORTANT NOTICE!

There are no user serviceable parts inside this unit. Do not attempt any repairs yourself; doing so will void your manufactures warranty. Damages resulting from modifications to this fixture and/or the disregard of safety and general user instructions found in this user manual void the manufactures warranty and are not subject to any warranty claims and/or repairs.



LIMITED WARRANTY

A. Elation Professional® hereby warrants, to the original purchaser, Elation Professional® products to be free of manufacturing defects in material and workmanship for a period of two years (730 days), and Elation Professional® product rechargeable batteries to be free of manufacturing defects in material and workmanship for a period of six months (180 days), from the original date of purchase. This warranty excludes discharge lamps and all product accessories. This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.

B. For warranty service, send the product only to the Elation Professional® factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, Elation Professional® will pay return shipping charges only to a designated point within the United States. If any product is sent, it must be shipped in its original package and packaging material. No accessories should be shipped with the product. If any accessories are shipped with the product, Elation Professional® shall have no liability what so ever for loss and/or or damage to any such accessories, nor for the safe return thereof.

C. This warranty is void if the product serial number and/or labels are altered or removed; if the product is modified in any manner which Elation Professional® concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the Elation Professional® factory unless prior written authorization was issued to purchaser by Elation Professional®; if the product is damaged because not properly maintained as set forth in the product instructions, guidelines and/or user manual.

D. This is not a service contract, and this warranty does not include any maintenance, cleaning or periodic check-up. During the periods as specified above, Elation Professional® will replace defective parts at its expense, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of Elation Professional® under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of Elation Professional®. All products covered by this warranty were manufactured after January 1, 1990, and PAR 200e identifying marks to that effect.

E. Elation Professional® reserves the right to make changes in design and/or performance improvements upon its products without any obligation to include these changes in any products theretofore manufactured.

F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with the products described above. Except to the extent prohibited by applicable law, all implied warranties made by Elation Professional® in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty periods set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said periods have expired. The consumer's and/or dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall Elation Professional® be liable for any loss and/or damage, direct and/or consequential, arising out of the use of, and/or the inability to use, this product.

G. This warranty is the only written warranty applicable to Elation Professional® products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.



SAFETY INSTRUCTIONS



This fixture is an extremely sophisticated piece of electronic equipment. To guarantee a smooth operation, it is important to follow the guidelines in this manual. The manufacturer of this device will not accept responsibility for damages resulting from the misuse of this fixture due to the disregard of the information printed in this manual.

This device falls under **PROTECTION CLASS 1**. It's essential this device be grounded properly. Only qualified personnel should perform all electrical connections.



I N D O O R S U S E O N L Y ! DO NOT EXPOSE FIXTURE RAIN AND MOISTURE!



UNPLUG POWER BEFORE SERVICING FIXTURE! DO NOT PLUG FIXTURE INTO A DIMMER PACK! NEVER TOUCH FIXTURE DURING OPERATION, AS IT MAY BE HOT!

NEVER LOOK DIRECTLY INTO THE LIGHT SOURCE! SENSITIVE PERSONS MAY SUFFER AN EPILEPTIC SHOCK!

- For proper operation, follow the **Installation** guidelines described in this manual. Only qualified and certified personnel should perform installation of this fixture and only the original rigging parts (brackets) included with this fixture should be used for installation. Any modifications will void the original manufactures warranty and increase the risk of damage and/or personal injury.
- Never look directly into the light source of this fixture to prevent risk of injury to your retina, which may induce blindness. Those suffering from **EPILEPSY** should avoid looking directly into the light source of this unit at all times.
- The fan and air inlets must remain clean and never blocked. Allow approx. 6" (15cm) between this fixture and other devices or a wall for proper cooling.
- Always disconnect from main power source before performing any type of service and/or cleaning procedure. Only handle the power cord by the plug end, never pull out the plug by tugging the wire portion of the cord.
- Do not operate this fixture if the power cord has become frayed, crimped and/or damaged. If the power cord is damaged, replace it immediately with a new one of similar power rating.




GENERAL GUIDELINES

• <u>NEVER OPEN THIS FIXTURE WHILE IN USE!</u>

- During the initial operation of this fixture, a light smoke or smell may emit from the interior of the fixture. This is a normal process and is caused by excess paint in the interior of the casing burning off from the heat associated with the lamp and will decrease gradually over time.
- This fixture is a professional lighting effect designed for INDOOR / DRY LOCATIONS
 ONLY on stage, in nightclubs, theatres, etc.
- Please make sure there are **NO FLAMMABLE MATERIALS** close to the fixture while operating, to prevent any fire hazard.
- The fixture must be installed in a location with adequate ventilation, at least 1.5 feet (.5m) from adjacent surfaces. Be sure no air ventilation slots are blocked.
- **DO NOT** attempt installation and/or operation without knowledge how to do so.
- **DO NOT** permit operation by persons who are not qualified to operate this type of fixture. Most damages are the result of operations by nonprofessionals.
- Consistent operational breaks may ensure the fixture will function properly for many years to come.
- **DO NOT** shake fixture, avoid brute force when installing and/or operating fixture.
- Always install the fixture with an appropriate safety cable. When installing the fixture in a suspended environment, always use mounting hardware that is no less than M10 x 25 mm, also be sure the hardware is insert in the pre-arranged screw holes in the bracket of the fixture.
- Use the original packaging and materials to transport the fixture in for service.
- **DO NOT TOUCH** the housing PAR 200e-hand during its operation. Turn OFF the power and allow approximately 15 minutes for the fixture to cool down before replacing or serving.



FIXTURE OVERVIEW

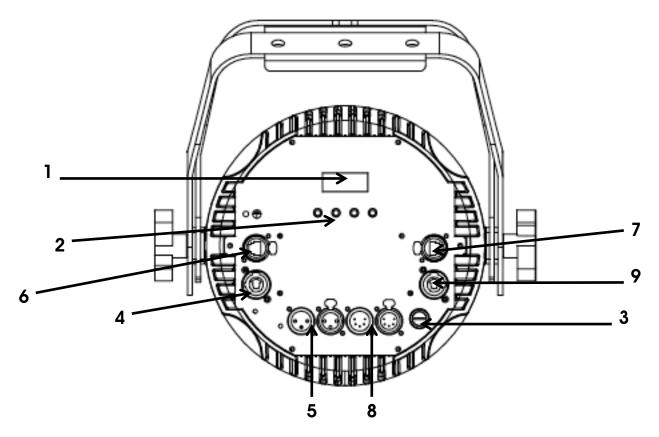

- 1: LCD Control Display
- 2: MODE, UP, DOWN, ENTER Buttons
- 3: Fuse
- 4: powerCON IN
- 5: 3pin, 5pin DMX IN

- 6: NET IN (RJ45 Ethernet)
- 7: NET OUT (RJ45 Ethernet)
- 8: 3pin, 5pin DMX OUT
- 9: powerCON OUT



FIXTURE INSTALLATION



FLAMMABLE MATERIAL WARNING Keep fixture at least 5.0 ft (1.5m) away from any flammable materials, decorations, pyrotechnics, etc.



ELECTRICAL CONNECTIONS

A qualified electrician should be used for all electrical connections and/or installations.


CAUTIONS

- For added protection, mount the fixture in areas outside walking paths, seating areas, or in areas were unauthorized personnel might reach the fixture.
- Ambient operating temperature range for this fixture is 5° to 113°F. (-15° to 45°C)
 Do not use the fixture under or above this temperature.
- Before mounting the fixture to any surface, make sure the installation area can hold a minimum point load of 10 times the weight of the fixture.
- Fixture installation must always be secured with a secondary safety attachment, such as an appropriate safety cable.
- Never stand directly below the device when mounting, removing or servicing.

MOUNTING POINTS

- Overhead mounting requires extensive experience, including amongst others calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the device. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.
- Fixture is fully operational in the specific mounting positions as illustrated on next page.



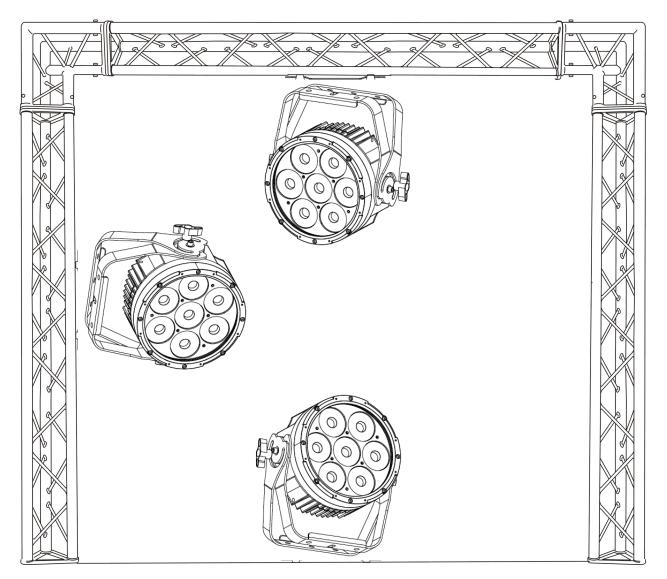

SAFETY CABLE

ALWAYS USE A SAFETY CABLE (NOT INCLUDED) WHENEVER INSTALLING THIS FIXTURE IN A SUSPENDED ENVIRONMENT TO ENSURE THE FIXTURE WILL NOT DROP IF THE CLAMP FAILS.

POWER LINKING

Max number of units that can be power linked is 9 units @110V and 21 units @240V.

CLAMP MOUNTING

The fixture provides an integrated mounting dual bracket / yoke. Make sure to secure an appropriately rated clamp to the mounting bracket using M10 screws when mounting this fixture to truss.



FIXTURE MENU

ON-BOARD SYSTEM MENU

The fixture comes with an easy to navigate system menu. The next section will detail the functions of each command in the system menu.

 
LCD MENU CONTROL PANEL

The control panel (see image below) located on back of the fixture allows you to access the main menu and make all necessary adjustments to the fixture. During normal operation, pressing **MODE** button once will access the fixture's main menu. Once in the main menu you can navigate through the different functions and access the sub-menus with the **UP** and **DOWN** buttons. Once you reach a field that requires adjusting, press the **ENTER** button to activate that field and use the **UP** and **DOWN** buttons to adjust the field. Pressing the **ENTER** button once more will confirm your setting. You may exit the main menu at any time without making any adjustments by pressing the **MODE** button.



INFORMATION DISPLAYED DURING INITIAL POWER ON

When the fixture is initially powered ON, the display shows the following information:



Fixture Software Version (Greater than or equal to)




		ELATION© ACL PAR					
(not	ifications are sub	SYSTEM MEN					
MENU	OPTIONS / VALU		prior written notice. Defaults In Bold. DESCRIPTION				
DMX MODE ADDR:001 CH:xx	ADDR:001 - 512 4CH1:04, 4CH2		DMX Address Setting DMX Channel Mode				
SLAVE M O D E			Set Fixture To Slave Mode				
AUTO RUN FQN:xx	FQN:01-99		Set Number Of Times Each AUTO PROGRAM MACRO Repeats Before Moving To Next Macro.				
01.STATIC - 15.FLOW 1	01.STATIC CL:RGB FADE0	0	Select INTERNAL PROGRAM MACRO.				
Dim Curve	Standard, Stage	e, TV, Architec, Theatre	Set Desired Dimming Curve				
Pixel Flip	STANDARD , Flip	1, Flip 2, Flip 3	Set Starting Pixel LED. See Pixel Flip Setting Section.				
NO DMX	Hold, Blackout,	•	Define How Fixture Reacts When NO DMX Signal Present.				
Manual	W000-255 Str	00- 255 B 000- 255 obe:000	Set RGBW + Strobe values manually for ALL 7 LEDs.				
Macros	01- 64		Set Color Macro.				
	Blackligh 02S-6C		LCD Display Shutoff Time.				
LCD Set	Key Lock OFF , C		Set Control Display Key Lock Feature.				
	DispFlas ON , OF	F	LCD Display flashes when NO Signal is detected.				
Temp	F ° , C°		Set temperature to F° / C°				
DFSE	OFF, ON		Restore Factory Settings.				
	TimeInfo	Current 0000 TotalTim 0000 LastClea 0000 TimerPIN XXXX	Displays Internal Timers. Enter PIN [066] To Access Clear Timer Function.				
Info		ClearLas [OFF , ON]					
	Temp Info	XXX F°	Displays Current Fixture Temperature.				
	ModelInf	ACL Par	Displays Model Name.				
	Software	≥1U01V106 ≥2U01V104	Displays Software Versions. (Greater Than or Equal To)				
	Fix ID Ser PIN	Ser PIN Pass= 050	Enter PIN [050] to access Network Menus.				
	Fix ID IP Addr	000.000.000.000	Set Fixture IP Address. (Need to enter Service PIN to access this menu)				
Net Set	Fix ID Universe	000 -255	Set DMX Universe number. (Need to enter Service PIN to access this menu)				
	Net Set Pro Set	ArtNet, K- Net	Set Protocol.				
	Net Set Net Swi	ON , OFF	Set Ethernet switch.				



Dim Curve


Select desired DIMMER MODE (Standard, Stage, TV, Architec, Theatre).

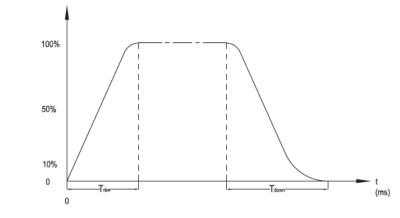

Ramp Effect	02	⁵⁵ 0S (Fade Time)	0	⁻²⁵⁵ 1S (Fade Time)	
namp Enect	Trise (ms)	Tdown (ms)	Trise (ms)	Tdown (ms)	
Standard	0	0	0	0	
Stage	780	1100	1540	1660	
TV	1180	1520	1860	1940	
Architectural	1380	1730	2040	2120	
Theatre	1580	1940	2230	2280	

Pixel Flip

Select the desired starting LED and chase direction from one of the following modes below via **UP/DOWN** buttons and then press **ENTER** to confirm. **(Default = STANDARD)**

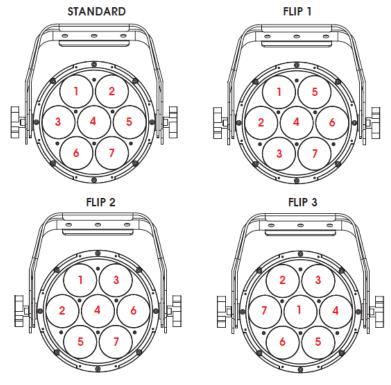



DMX CHANNEL FUNCTIONS AND VALUES

			DMX	Chanr			© ACL nctions '			MX Ch	annels)	
	*0						change					
	^CONIO	I OI LEDS	aepena		HANNEL N		^^CH27	iviode d	ioes noi i	nciude d	VALUE	4, 5, 6, 22, 23, 24. FUNCTION
4CH1:04	4CH2:04	6СН	8CH	10CH	12CH	27CH	28CH	30CH	32CH	35CH	VALUE	16 BIT CHANNELS
	40112104					27 011			02011			RED LED - All LEDS [1-7]
	1	1	1	1	1						0-255	Red (0-Black - 255-100%)
											0 200	GREEN LED - All LEDs [1-7]
	2	2	2	2	2						0-255	Green (0-Black - 255-100%)
	3	3	3	3	3							BLUE LED - All LEDs [1-7]
	5	5	5	5	5						0-255	Blue (0-Black - 255-100%)
	4	4	4	4	4							WHITE LED - All LEDs [1-7]
											0-255	White (0-Black - 255-100%)
						1	1	1	1	1	0.055	RED LED - LED [1]
											0-255	Red (0-Black - 255-100%)
						2	2	2	2	2	0.055	GREEN LED - LED [1]
											0-255	Green (0-Black - 255-100%) BLUE LED - LED [1]
						3	3	3	3	3	0-255	
											0-200	Blue (0-Black - 255-100%) WHITE LED - LED [1]
							4	4	4	4	0-255	
											0-200	White (0-Black - 255-100%) RED LED - LED [2]
						7	5	5	5	5	0-255	Red (0-Black - 255-100%)
											0 200	GREEN LED - LED [2]
						8	6	6	6	6	0-255	Green (0-Black - 255-100%)
											0 200	BLUE LED - LED [2]
						9	7	7	7	7	0-255	Blue (0-Black - 255-100%)
												WHITE LED - LED [2]
							8	8	8	8	0-255	White (0-Black - 255-100%)
								_	-	-		RED LED - LED [3]
						10	9	9	9	9	0-255	Red (0-Black - 255-100%)
							10	10	10	10	1	GREEN LED - LED [3]
						11	10	10	10	10	0-255	Green (0-Black - 255-100%)
						10	11	11	11	11		BLUE LED - LED [3]
						12	11	11	11	11	0-255	Blue (0-Black - 255-100%)
							10	10	10	10		WHITE LED - LED [3]
							12	12	12	12	0-255	White (0-Black - 255-100%)



			DMX	Chanr			© ACL			MX Ch	annels)	
	*Contro	l of LEDs	Spec	ification	s are sub	oject to	change	without	any pric	or written	notice	
	DMX CHANNEL MODE											FUNCTION
4CH1:04	4CH2:04	6CH	8CH	10CH	12CH	27CH	28CH	30CH	32CH	35CH		16 BIT CHANNELS
						10	10	10	10	10		RED LED - LED [4]
						13	13	13	13	13	0-255	Red (0-Black - 255-100%)
						14	14	14	14	14		GREEN LED - LED [4]
						14	14	14	14	14	0-255	Green (0-Black - 255-100%)
						15	15	15	15	15		BLUE LED - LED [4]
						15	15	15	15	15	0-255	Blue (0-Black - 255-100%)
							16	16	16	16		WHITE LED - LED [4]
							10	10	10	10	0-255	White (0-Black - 255-100%)
						16	17	17	17	17		RED LED - LED [5]
						10	17	17	17	17	0-255	Red (0-Black - 255-100%)
						17	18	18	18	18		GREEN LED - LED [5]
						17	10	10	10	10	0-255	Green (0-Black - 255-100%)
						18	19	19	19	19		BLUE LED - LED [5]
						10	19	17	17	17	0-255	Blue (0-Black - 255-100%)
							20	20	20	20		WHITE LED - LED [5]
							20	20	20	20	0-255	White (0-Black - 255-100%)
						19	21	21	21	21		RED LED - LED [6]
						17	21	21	21	21	0-255	Red (0-Black - 255-100%)
						20	22	22	22	22		GREEN LED - LED [6]
						20	22	22	22	22	0-255	Green (0-Black - 255-100%)
						21	23	23	23	23		BLUE LED - LED [6]
						21	23	23	23	23	0-255	Blue (0-Black - 255-100%)
							24	24	24	24		WHITE LED - LED [6]
							24	24	24	24	0-255	White (0-Black - 255-100%)
						25	25	25	25	25		RED LED - LED [7]
						20	20	20	20	20	0-255	Red (0-Black - 255-100%)
						26	26	26	26	26		GREEN LED - LED [7]
						20	20	20	20	20	0-255	Green (0-Black - 255-100%)
						07	07	07	07	07		BLUE LED - LED [7]
						27	27	27	27	27	0-255	Blue (0-Black - 255-100%)
							00	28	28	28		WHITE LED - LED [7]
							28	Zδ	28	28	0-255	White (0-Black - 255-100%)



	Specifications are subject to change without any prior written notice. *Control of LEDs depends on the Pixel Flip setting. **CH27 Mode does not include channels 4, 5, 6, 22, 23, 24. DMX CHANNEL MODE VALUE FUNCTION											
				DMX C	HANNEL N	IODE					VALUE	FUNCTION
CH1:04	4CH2:04	6CH	8CH	10CH	12CH	27CH	28CH	30CH	32CH	35CH		16 BIT CHANNELS
												COLOR MACROS
											0	NO Function
											1-4	Color Macro 01
											5-8	Color Macro 02
											9-12	Color Macro 03
											13-16	Color Macro 04
											17-20	Color Macro 05
											21-24	Color Macro 06
											25-28	Color Macro 07
											29-32	Color Macro 08
											33-36	Color Macro 09
											37-40	Color Macro 10
											41-44	Color Macro 11
											45-48	Color Macro 12
											49-52	Color Macro 13
											53-56	Color Macro 14
1			5		5						57-60	Color Macro 15
I			0		0						61-64	Color Macro 16
											65-68	Color Macro 17
											69-72	Color Macro 18
											73-76	Color Macro 19
											77-80	Color Macro 20
											81-84	Color Macro 21
											85-88	Color Macro 22
											89-92	Color Macro 23
											93-96	Color Macro 24
											97-100	Color Macro 25
											101-104	Color Macro 26
											105-108	Color Macro 27
											109-112	Color Macro 28
											113-116	Color Macro 29
											117-120	Color Macro 30
											121-124	Color Macro 31
											125-128	Color Macro 32



			Spe	ecificatio	ons are	alues / subjec	t to cho	ons Vei ange wi	rsion 1 thout ar	(35 DN ny prior	1X Chan written no	otice.
	*Contro	ol of LEE)s depe				ng. **(CH27 M	ode doe	es not inc	-	nnels 4, 5, 6, 22, 23, 24.
				DMX CH	ANNEL M	ODE					VALUE	FUNCTION
4CH1:04	4CH2:04	6CH	8CH	10CH	12CH	27CH	28CH	30CH	32CH	35CH		16 BIT CHANNELS
												COLOR MACROS [continued]
											129-132	Color Macro 33
											133-136	Color Macro 34
											137-140	Color Macro 35
											141-144	Color Macro 36
											145-148	Color Macro 37
											149-152	Color Macro 38
											153-156	Color Macro 39
											157-160	Color Macro 40
											161-164	Color Macro 41
											165-168	Color Macro 42
											169-172	Color Macro 43
											173-176	Color Macro 44
											177-180	Color Macro 45
											181-184	Color Macro 46
											185-188	Color Macro 47
1			5		5						189-192	Color Macro 48
											193-196	Color Macro 49
											197-200	Color Macro 50
											201-204	Color Macro 51
											205-208	Color Macro 52
											209-212	Color Macro 53
											213-216	Color Macro 54
											217-220	Color Macro 55
											221-224	Color Macro 56
											225-228	Color Macro 57
											229-232	Color Macro 58
											233-236	Color Macro 59
											237-240	Color Macro 60
											241-244	Color Macro 61
											245-248	Color Macro 62
											249-252	Color Macro 63
											253-255	Color Macro 64
												STROBE
											0-31	NO Function
											32-63	LEDs ON
											64-95	Strobe Effect SLOW to FAST
2			6	5	6				29	29	96-127	LEDs ON
											128-159	Pulse Effect Sequence SLOW to FAST
											160-191	LEDs ON
											192-223	Random Strobe Effect SLOW to FAST
											224-255	LEDs ON



						alues / I		ons Vers	ion 1 (3	35 DM)	K Chann vritten not	
	*Contro	ol of LED	s depei	nds on th	ne Pixel I	-lip settir	ng. **C	H27 Mo	de does	not incl	ude chanı	nels 4, 5, 6, 22, 23, 24.
	DMX CHANNEL MODE											FUNCTION
4CH1:04	4CH2:04	6CH	8CH	10CH	12CH	27CH	28CH	30CH	32CH	35CH		16 BIT CHANNELS
		_	_		_							MASTER DIMMER
3		5	7	6	7			29	30	30	0-255	0 to 100%
		,	0	-	0				0.1			FINE DIMMER [16BIT]
4		6	8	7	8			30	31	31	0-256	1 to 100%
												AUTO PROGRAMS
											0	NO FUNCTION
											1-20	PROGRAM MACRO 01
											21-40	PROGRAM MACRO 02
											41-60	PROGRAM MACRO 03
											61-80	PROGRAM MACRO 04
											81-100	PROGRAM MACRO 05
				0	0					20	101-120	PROGRAM MACRO 06
				8	8 9 3	32	121-140	PROGRAM MACRO 07				
											141-160	PROGRAM MACRO 08
											161-180	PROGRAM MACRO 09
											181-200	PROGRAM MACRO 10
											201-220	PROGRAM MACRO 11
											221-240	PROGRAM MACRO 12
											241-250	PROGRAM MACRO 13
											251-255	PROGRAM MACRO 14
				0	10					2.2		AUTO PROGRAM SPEED
				9	10					33	0-255	Program Speed SLOW to FAST
				10	11					24		AUTIO PROGRAM FADE
				10	11					34	0-255	Program Fade SLOW to FAST
												DIMMING CURVE MODES
											0-20	STANDARD
											21-40	STAGE
					12				32	35	41-60	TV
											61-80	ARCHITECTURAL
						81-100	THEATRE					
											101-255	Default to Unit Setting



CLEANING AND MAINTENANCE



CLEANING

Frequent cleaning is recommended to insure proper function, optimized light output, and an extended life. The frequency of cleaning depends on the environment in which the fixture operates: damp, smoky or particularly dirty environments can cause greater accumulation of dirt on the fixture's optics.

- Clean the external lens surface at least every 20 days with a soft cloth to avoid dirt/debris accumulation.
- Never use alcohol, solvents, or ammonia based cleaners.

MAINTENANCE

Regular inspections are recommended to insure proper function and extended life. There are no user serviceable parts inside this fixture, please refer all other service issues to an authorized Elation service technician. Should you need any spare parts, please order genuine parts from your local Elation dealer.

Please refer to the following points during routine inspections:

- A detailed electric check by an approved electrical engineer every three months, to make sure the circuit contacts are in good condition and prevent overheating.
- Be sure all screws and fasteners are securely tightened at all times. Lose screws may fall out during normal operation resulting in damage or injury as larger parts could fall.
- Check for any deformations on the housing, color lenses, rigging hardware and rigging points (ceiling, suspension, trussing). Deformations in the housing could allow for dust to enter into the fixture. Damaged rigging points or unsecured rigging could cause the fixture to fall and seriously injure a person(s).
- Electric power supply cables must not show any damage, material fatigue or sediments. Never remove the ground prong from the power cable.



TECHNICAL SPECIFICATIONS

SOURCE

(7) 15W RGBW 4-in-1 LEDs

100,000 Hour Average Lamp Life*

*May vary depending on several factors including but not limited to: Environmental Conditions, Power/Voltage, Usage Patterns (On-Off Cycling), Control, and Dimming.

EFFECTS

Individual Pixel Control Strobe and Selectable Dimming Curves

COLOR

RGBW

CONTROL / CONNECTIONS

(11) DMX Channel Modes (4CH1:04 / 4CH2:04 / 6 / 8 / 10 / 12 / 27 / 28 / 30 / 32 / 35)
RDM (Remote Device Management)
4 Button Touch Control Panel
Full Color 180° Reversible LCD Menu Display
8 / 16 Bit Resolution Adjustable Movement
3pin/5pin DMX In/Out
RJ45 Ethernet In/Out (KlingNET[™] / Art-NET)
powerCON Power In/Out

SIZE / WEIGHT

Length: 12.3" (313mm) Width: 5.6" (142mm) Vertical Height: 11.8" (300mm) Weight: 13.0 lbs. (5.9 kg)

ELECTRICAL / THERMAL

AC 100-240V - 50/60Hz 110W Max Power Consumption 5F to 113°F (-15°C to 45°C)


APPROVALS / RATINGS

CE | IP30


Please Note: Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.



PHOTOMETRIC DATA

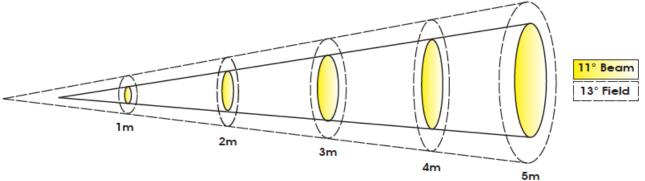

DIMENSIONAL DRAWINGS

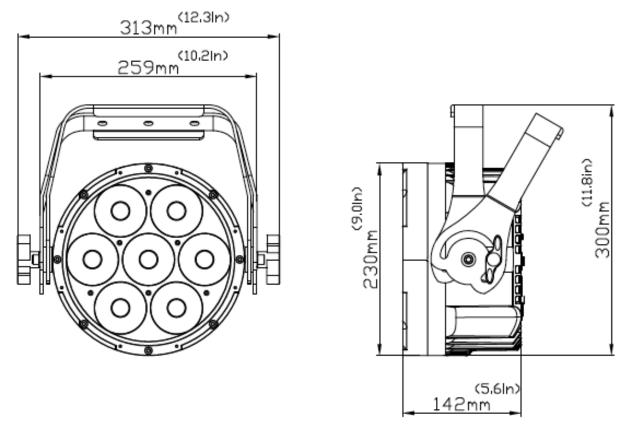

Please Note: Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.

OPTIONAL ACCESSORIES

ORDER CODE	ITEM
TRIGGER CLAMP	Heavy Duty Wrap Around Hook Style Clamp
EWDMXSYSTEM	Wireless DMX System (1 Transmitter, 1 Receiver)
CAT005	5' (1.5m) CAT6 EtherCON Cable
PLC3	3 ft. (1m) PowerCON PRO Link Cable
AC3PDMX5PRO	5 ft. (1.5m) 3pin PRO DMX Cable
AC5PDMX5PRO	5 ft. (1.5m) 5pin PRO DMX Cable
	Additional Cable Lengths Available