



2507 HOWARD LANE, AUSTIN, TX 78728

WWW.LIGHTPARTS.COM

LEDBeam 100 Parts List

Item	Description
12010217	Spacer DIA D6 L15,7 M3
17030628	O ring 2,9x1,78
18010008	Screw crosswise cup headed M3x8
18010016	Screw crosswise cup headed M3x6
18010118	Screw crosswise cup countersink M4x10
18020063	Screw self-tapping countersink 2,9x6,5
19010346	Cover of head (plastic)
19010347	Cover of arm (plastic)
19010348	Cover of arm - inside (plastic)
19010349	Cover of base - connectors (plastic)
19010350	Cover of base - fan (plastic)
19020093	EggCrate Robin 100 LEDBeam (black)
19020094	Top Hat Robin 100 LEDBeam (black)
12010212	Spacer hexagon SW6 DIA L27,6 M3-M4
13031053-01	PCB RB8021, 12 RGBWW OSTAR
13031113	PCB RB2700 Robin 100 LEDBeam L
13050112	Terminal end 7600-02/03
13051683	Foil insulating "LB 100"
16030036	Fan KD1206 PTBX 60x60x25 12V
18010008	Screw crosswise cup headed M3x8
18010016	Screw crosswise cup headed M3x6
18010032	Screw crosswise cup countersink M3x8
18010056	Screw crosswise cup countersink M3x30
19530213	Cooler LB 100
99013499-01	LED module - lens Fraen FXCM-34-FSG-0R
14060373-01	LED lens Fraen FXCM-34-FSG-0R
11013913-01	Holder of stepper motor "X"
11013921	Stiffener of stepper motor
11013926	Toothwheel D40 d14
11030537	Grounding of arm of axe "Y" right
11030538	Grounding of arm of axe "Y" left
12040037-03	Toothwheel RPP3 D25 d5



2507 HOWARD LANE, AUSTIN, TX 78728

WWW.LIGHTPARTS.COM

13030761	PCB MH-1
13031114	PCB RB2710 Robin 100 LEDBeam M
16010033	Steppermotor 17HC2001-01N –A
17040812	Grounding for holder of steppermotor
18010003	Screw crosswise cup headed M2x3
18010007	Screw f. adjusting hexagon socket M4x5
18010016	Screw crosswise cup headed M3x6
18010032	Screw crosswise cup countersink M3x8
18010033	Screw crosswise cup countersink M3x6
18020009	Screw self-tapping 2,9x6,5
18050064	Washer M3 star - countersink
11013911-02	Holder of steppermotor
11013926	Toothwheel D40 d14
12040037-03	Toothwheel RPP3 D25 d5
12040106	Toothwheel D66 (inner diameter 16)
12050565	Holder ball-bearing
12050662	Insert of ball bearing
13030761	PCB MH-1
16010033	Steppermotor 17HC2001-01N –A
17010008	Ball bearing 6806-ZZ
17020037	Belt 357 RPP3/06
18010003	Screw crosswise cup headed M2x3
18010007	Screw f. adjusting hexagon socket M4x5
18010073	Screw socket head cap M4x8
18010076	Screw crosswise cup countersink M3x5
18010118	Screw crosswise cup countersink M4x10
18020009	Screw self-tapping 2,9x6,5
18050002	Washer M4 black
18510048	Screw crosswise cup headed M4x25
18550003	Washer M4 selflock - brass
11010490	Spring ring D46 d32 Tl 0,32
12010213	Spacer hexagon SW6 L11 M3
12040100-01	Toothwheel D66 (inner diameter 32)
12050563-01	Ring-plastic



2507 HOWARD LANE, AUSTIN, TX 78728

WWW.LIGHTPARTS.COM

12050564	Screw socket head cap M5x10 (stopper)
12050664	Pivot "X"
12050666	Holder ball-bearing
17010009	Ball bearing 6905-2RS
17020001	Belt 270 RPP3/06
17030005	Lock ring No.:25
17030578	O ring 6x1,5
17050381	Holder of axes with nuts
18010033	Screw crosswise cup countersink M3x6
18010063	Screw crosswise cup countersink M4x12
18040003	Nut selflock M5
18040020	Nut selflock M4 silver
18050006	Washer M5 selflock - black
18050007	Washer M5 black
18510267	Screw countersink inside hexagon M4x20 brass
99030101	Movement-stop "X"
11013909	Positioning cam
11013910-01	Washer 3mm D16 d8
11013919	Key for axe "Y"
12050565	Holder ball-bearing
12050593	Nut of stopper SW7 M4
12050662	Insert of ball bearing
12050663	Shield-dural
13030822	PCB MH-2
13051408	Spade terminal 4,8
17010008	Ball bearing 6806-ZZ
17040809	Holder of axe "Y" with nuts
17040814	Holder of PCB with nuts
18010010	Screw crosswise cup countersink M4x14
18010033	Screw crosswise cup countersink M3x6
18010037	Screw crosswise cup headed M4x10
18010118	Screw crosswise cup countersink M4x10
18010145	Screw crosswise cup headed M3x5
18040001	Nut M4 black



2507 HOWARD LANE, AUSTIN, TX 78728

WWW.LIGHTPARTS.COM

18050003	Washer M4 selflock - black
18050010	Washer M4 star - black
13051697	Toroid ferrite GTFC 23-11-14
16030063	Fan PAPST 512F 50x50x15/connector L20
17040815	Supporting part of base with nuts
17040817	Front panel with nuts
18010035	Screw crosswise cup countersink M4x8
18010118	Screw crosswise cup countersink M4x10
18040022	Nut selflock M3 silver
18050001	Washer M3 black
18510233	Screw countersink inside hexagon M5x16 brass
99010420	Mounting bracket Omega CL assembled
12010210	Spacer D6xL14,5 M3
13031090-03	PCB RB2721-V2 MINI LCD DISPLAY
13031094	PCB RB2730 DMX for Wireless
13050686	Connector NEUTRIK NAC3MPA-1
13050734	Connector NEUTRIK NAC3MPB-1
17040816-01	Panel of connectors with nuts
18010008	Screw crosswise cup headed M3x8
18010032	Screw crosswise cup countersink M3x8
18010117	Screw crosswise cup countersink M3x12
18020002	Screw self-tapping 2,9x9,5
18040005	Nut M3 black
18050009	Washer M3 selflock - black
11013933	Holder of cables
12010214	Spacer hexagon SW6 L40 M4-M3
12020139	Spacer D5xd3xL2,1
13020062	Power Supply CCI LM200A3J33B (24V DC/200W)
13050103	Fuse socket - FGP1
13051718	Foil insulating (power supply) "LB 100"
17030016	Rubber base GF2
17040818-01	Cover of base with nuts
18010054	Screw crosswise cup headed M3x10
18010118	Screw crosswise cup countersink M4x10



2507 HOWARD LANE, AUSTIN, TX 78728

WWW.LIGHTPARTS.COM

18020021 Screw self-tapping 3,5x13

18050002 Washer M4 black