



2507 HOWARD LANE, AUSTIN, TX 78728

WWW.LIGHTPARTS.COM

RUSH MH 11 Beam Parts List

Item	Description
50481100	FRONT PLATE ASSEMBLY WITH PCB MH 7
50481103	FIXED PLATE FOR PSU MH 7 BASE
50481104	PSU MH 7 BASE
50481110	FOOT MH 7 BASE
50481111	QUICK LOCK MH 7 BASE
50481118	QUICK LOCK COVER MH 7 BASE
50481119	FUSE MH 7 BASE
50481123	XLR MALE SOCKET ASSEMBLY MH 7 BASE
50481124	XLR FEMALE SOCKET ASSEMBLY MH 7 BASE
50481125	DMX ASSY MH 7 BASE
50481130	KEYPAD MH 7 BASE
50481134	BALLAST ISOLATION MH 7 BASE
50481135	BALLAST MH 7 BASE
50481138	CENTRAL AXIS MH 7 BASE
50481139	LOLLIPOP MH 7 BASE
50481140	WASHER MH 7 BASE
50481142	HORIZONTAL AXLE SLEEVE MH 7 BASE
50481143	CENTER AXLE SLEEVE MH 7 BASE
50481144	HORIZONTAL PULLEY MH 7 BASE
50481155	BELT DRIVE MH 7 YOKE
50481156	LOCATING PLATE MH 7 YOKE
50481157	SPRING TILT MOTOR MH 7 YOKE
50481158	WIRE POST MH 7 YOKE
50481160	INSULATING MAT MH 7 YOKE
50481162	TILT PULLEY MH 7 YOKE
50481164	MAGNET MH 7 YOKE
50481167	WIRE-PASSING RING MH 7 YOKE
50481172	TILT SHAFT SLEEVE ASSY MH 7 YOKE
50481173	RUBBER SLEEVE MH 7 YOKE
50481175	CIRCLIP FOR SHAFT MH 7 YOKE
50481177	TILT LOCK LOCATION PILLAR MH 7 YOKE
50481180	COMPRESSION SPRING MH 7 YOKE



2507 HOWARD LANE, AUSTIN, TX 78728

WWW.LIGHTPARTS.COM

50481183	WIRE GUIDE COVER MH 7 YOKE
50481198	THERMAL INSULATION MH 7 YOKE
50481199	LAMP CUP LOCATING PLATE MH 7 YOKE
50481201	LAMP CUP SUBPLATE MH 7 YOKE
50481202	PRESSURE SPRING FOR LAMP MH 7 YOKE
50481203	SPRING PRESSING CHIP MH 7 YOKE
50481205	LAMP MH 7
50481208	THERMOSENSITIVE BOARD MH 7 YOKE
50481209	BLOWER MH 7 YOKE
50481211	SHUTTER ASSEMBLY 1 MH 7 YOKE
50481214	HEX COPPER PILLAR MH 7 YOKE
50481215	WIRE GUIDE RING MH 7 YOKE
50481217	THERMAL SWITCH MH 7 YOKE
50481223	FAN FIXED MOUNT MH 7 YOKE
50481225	LOCATING PILLAR 7 YOKE
50481228	MOTOR SUBPLATE 7 YOKE
50481229	COPPER PILLAR 7 YOKE
50481231	PILLAR 7 YOKE
50481237	HASP MH 7 YOKE
50481241	DRIVER PULLEY MH 7 YOKE
50481246	DRIVING GEAR MH 7 HEAD
50481247	COLOR WHEEL ASSEMBLY MH 7 HEAD
50481287	ALUMINUM PILLAR 7 HEAD
50481323	DRIVING GEAR 7 HEAD
5093945-00	MH 11 Head Cover Assembly
5093946-00	MH 11 Lens Ring
5093947-00	MH 11 Rear Arm Cover
5093948-00	MH 11 Front Arm Cover
5093949-00	MH 11 Front/Rear Base Cover
5093950-00	MH 11 Base Cover Plate II
5093951-00	MH 11 Handle
5093952-00	MH 11 Side Cover
5093953-00	MH 11 DC Fan
5093954-00	MH 11 Side Plate?Assembly



2507 HOWARD LANE, AUSTIN, TX 78728

WWW.LIGHTPARTS.COM

5093955-00	MH 11 Quick Lock Base
5093956-00	MH 11 Quick Lock Washer 0.8MM
5093957-00	MH 11 Quick Lock Washer 1MM
5093958-00	MH 11 Connector Dead Plate
5093959-00	MH 11 Power Socket
5093960-00	MH 11 Fuse Tube Holder
5093961-00	MH 11 PCB Assembly
5093962-00	MH 11 Base Side Plate II
5093963-00	MH 11 Stepping Motor
5093964-00	MH 11 Belt
5093965-00	MH 11 Light Sensor Assembly
5093966-00	MH 11 Magnetic Sensor
5093967-00	MH 11 Stepping Motor
5093968-00	MH 11 Light Sensor Assembly
5093969-00	MH 11 Magnetic Sensor
5093970-00	MH 11 Belt
5093971-00	MH 11 PCB Assembly
5093972-00	MH 11 PCB Assembly
5093973-00	MH 11 Radiator
5093974-00	MH 11 Stepping Motor
5093975-00	MH 11 Light Shielding Plate for fan
5093976-00	MH 11 DC Fan
5093977-00	MH 11 Blower
5093978-00	MH 11 Lamp Card
5093979-00	MH 11 Air Nozzle
5093980-00	MH 11 Frost Assembly
5093981-00	MH 11 spring(left)
5093982-00	MH 11 Belt
5093983-00	MH 11 Rotating Prism Wheel Assembly
5093984-00	MH 11 Magnetic Sensor
5093985-00	MH 11 Stepping Motor
5093986-00	MH 11 Stepping Motor
5093987-00	MH 11 PCB Assembly
5093988-00	MH 11 Stepping Motor



2507 HOWARD LANE, AUSTIN, TX 78728

WWW.LIGHTPARTS.COM

5093989-00	MH 11 Stepping Motor
5093990-00	MH 11 Stepping Motor
5093991-00	MH 11 Fixed axle A
5093992-00	MH 11 fixed shaft B
5093993-00	MH 11 Magnetic Sensor
5093994-00	MH 11 Blower
5093995-00	MH 11 Belt
5093996-00	MH 11 Driving Gear
5093997-00	MH 11 Belt
5093998-00	MH 11 Rotating Gobo Wheel Assembly
5093999-00	MH 11 Belt
5094000-00	MH 11 PCB Assembly
5094001-00	MH 11 Fixed Lens Assy
5094002-00	MH 11 Rear focus assembly
5094003-00	MH 11 Aluminium sheath A
5094004-00	MH 11 Focused bearing fixed plate?
5094005-00	MH 11 Bearings of auto-adjust hoop branch?
5094006-00	MH 11 Focusing bearing fixed plate III
5094007-00	MH 11 Focusing bearing fixed plate II
5094008-00	MH 11 Aluminium axle
5094009-00	MH 11 Belt
5094010-00	MH 11 Tensile Axis Assembly
5094011-00	MH 11 Magnetic Sensor
5094012-00	MH 11 Stepping Motor