


# pixelPATT

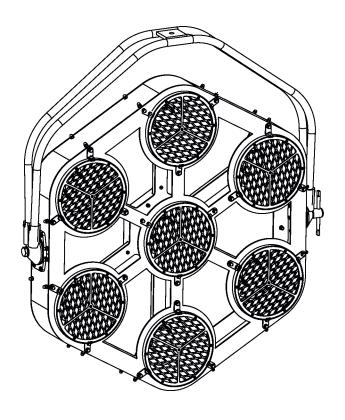

# **USER MANUAL**

Version 1.4

# **Table of contents**

1. Safety instructions	3
2. Description of the fixture	4
3. Installation	5
3.1 Mounting the pixelPATT	5
3.2 Connecting the pixelPATT with the PATT Driver	
4. Technical specifications	7

# FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY BEFORE INSTALLING THE PRODUCT

## 1. Safety instructions

#### **CAUTION!**

The PixelPATT was designed for indoor use only.

The product is for professional use only, it is not for household use.

This product has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the product.

If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

The pixel PATT should be operated with the PATT Driver only.

The PixelPATT becomes hot during its operation, allow it to cool prior to manipulation.

The pixelPATT unit never must be covered with cloth or other materials during operation.

Refer servicing to qualified service personnel.

Warning! Risk Group 2 LED product according to EN 62471
LED light emission. Risk of eye injury. Do not look into the beam at short distance of the of the product. Do not view the light output with optical instruments or any device that may conncentrate the beam.

The light source contains blue LEDs.


When choosing the installation spot, please make sure that the pixelPATT are not exposed to extreme heat, moisture or dust.

Operate the pixelPATT only after having familiarized with its functions. Do not permit operation by persons not qualified for operating the pixelPATT. Most damages are the result of unprofessional operation!


Please use the original packaging if the pixelPATT is to be transported.

Please consider that unauthorized modifications on the fixture are forbidden due to safety reasons!

# 2. Description of the fixture

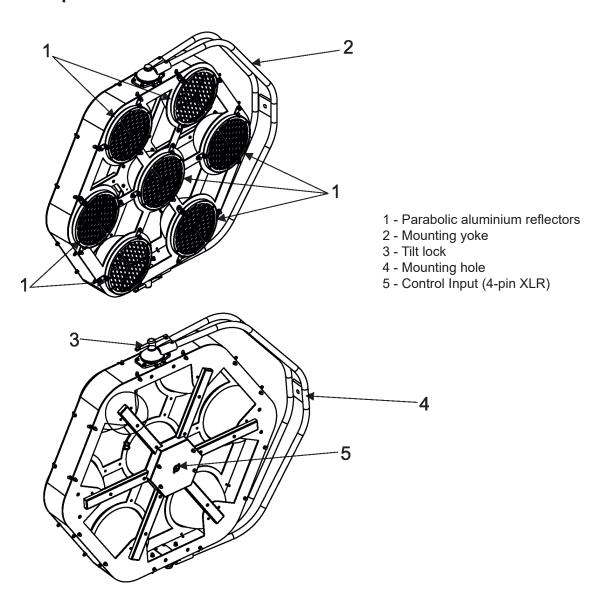

# Pixel positions

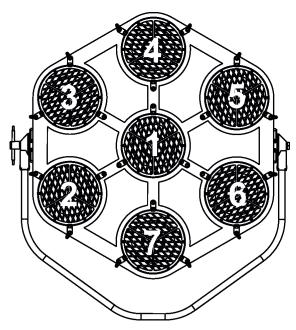

## 3. Installation

The PixelPatt must be installed by a qualified electrician in accordance with all national and local electrical and construction codes and regulations.

# 3.1 Mounting the pixelPATT


The fixture can be rigged to the truss or fastened to the floor stand via a mounting yoke. The hole of diameter of 13 mm in the yoke serves for fastening a clamp (or a spigot) to the yoke.

Note: the spigot has to be inserted into the floor stand and always secured.

For overhead installation the pixelPATT has to be always secured to the truss by means of a safety wire (that can hold at least 10 times the weight of the fixture) which is fastened to the truss and around mounting yoke of the pixelPATT.

## 3.2 Connecting the pixelPATT with the PATT Driver

- 1. Disconnect the PATT Driver from mains.
- 2. Connect the pixelPATT to the PATT Driver by means of the 4-pin data cable.
- 3. Connect the PATT Driver to mains and make desired setting.

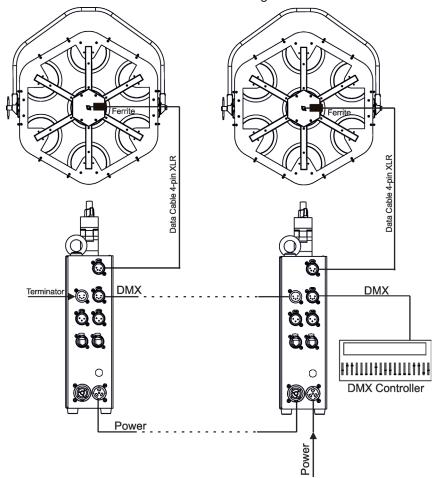

ALWAYS DISCONNECT THE PATT DRIVER FROM MAINS BEFORE CONNECTING/DISCONNECTING
THE PIXELPATT.

For CE only: If you do not use the original Robe Data Cable 4-pin XLR for connection between PixelPATT and PATT Driver, the ferrite RRC 17-11-28-M-K5B (Robe P/N 13051799) should be installed on the 4-pin XLR cable closely to the PixelPATT as shown on the picture bellow.

If you use the original Robe 4-pin XLR cable, this ferrite is part of the cable and you do not need to install another ferrite on the cable.

Ferrite RRC 17-11-28-M-K5B



## 4. Technical specifications

Input voltage: 48V
Max. power consumption: 210W
Compatible control driver: PATT Driver

Light source: 7x RGBW LED multichip LED life expectancy: min. 20 000 hours Typical lumen maintenance: 70% @ 20 000 hours

Optical System: 7 x 200 mm parabolic aluminium reflector with high reflectivity coating

Control input: Locking 4-pin XLR (male)

Max. length of cable between

PATT Driver and pixelPatt: 10m

Mounting Points: Mounting horizontally or vertically via mounting yoke (360° tilt range)

Rigging: M12 mounting for clamp or spigot.

Operation position: any


Ingress protection: IP20 (for dry location only)

Weight: 12 kg


Max. surface temperature: 65°C (at 45°C ambient)

Maximum ambient temperature: 45 °C
Total heat dissipation (calculated):716 BTU
Min. distance from flammable surfaces: 0.2 m
Min. distance of illuminated objects: 0.2 m

#### Dimensions (mm)

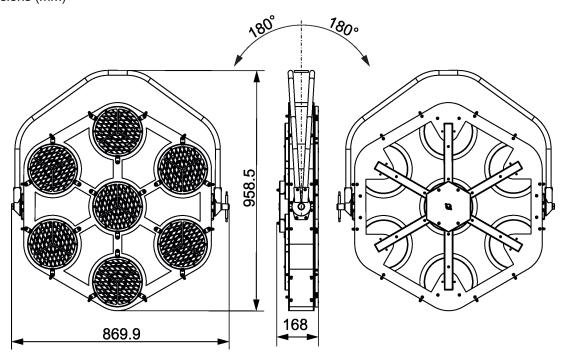

#### Wiring of control input:

 

## **Optional accessories**


(P/N 10980374) Tripod for PATT 2013/2017, pixelPATT (P/N 1098 0259) Floor Stand for PATT 2013, picklePATT

(P/N 1098 0260) Spigot for PATT 2013/2017/picklePATT, pixelPATT

(P/N 13052797) Data cable 4 pin XLR 10m, ferrite, EU (P/N 13052798) Data cable 4 pin XLR 5m, ferrite, EU

(P/N 13052799) Data cable 4 pin XLR 10m, ferrite, US (P/N13052800) Data cable 4 pin XLR 5m, ferrite, US (P/N 17030386) Doughty Trigger Clamp (P/N 99011963) Safety wire 35 kg (P/N 13051799) Ferite RRC 17-11-28-M-K5B (P/N 10055002) PATT Driver

#### **Beam distribution**

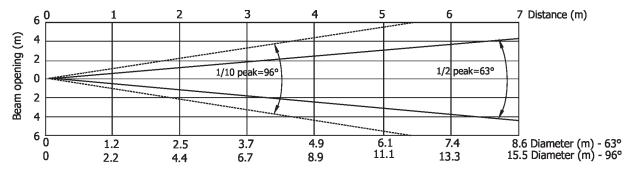

Distance (m)	1	2	3	4	5	6	7	
Red	175/16	44/4	20/2	11/1	7/0.7	5/0.5	4/0.3	
Green	300/28	75/7	33/3	19/3	12/1.1	8/0.8	6/0.6	
Blue	50/4.6	13/1.2	6/0.5	3/0.3	2/0.2	1.4/0.1	1/0.1	Intensity (center) Lux/Footcandles
White	500/47	125/12	56/5	31/3	20/1.9	14/1.3	10/0.9	
R+G+B+W	1000/93	250/23	111/10	63/6	40/3.7	28/2.6	20/2	

#### **Illuminance distribution**

Distance=5m

