



## Getting Started with SHOWBEAM™ 2.5

***Use the following steps to set up and configure your SHOWBEAM™ fixture:***

### Unpack

Unpack your SHOWBEAM™ 2.5 fixture and verify that it arrived undamaged. If the fixture is damaged, notify both the shipping agent and your sales agent immediately.

### Install Attachment Plugs

Install the correct power cord cap for your location. The cores in the mains lead are colored according to the following code:

- green and yellow = earth
- blue = neutral
- brown = live

Class 1 equipment - This equipment must be earthed.

### Mount

To mount the fixture upright, place the fixture on a sturdy, stable non-flammable surface that will support a weight of 66.2 kg (146 lb).

Truss mount the SHOWBEAM 2.5 fixture using its custom mounting bracket and clamps and a safety cable attached to the fixture's base.



#### **WARNING!**

**SHOWBEAM 2.5 projects a powerful light beam that generates intense heat.**

**Do not point directly at other lights on the rig.**

**Do not project onto flammable surfaces less than 6 m. (19.7 ft.)**



#### **Caution!**

**SHOWBEAM 2.5 fixtures should be installed and operated by trained personnel only.**

## Power Up


To power on the fixture, connect it to an appropriately-rated power source. (200-240 V, 50-60 Hz, minimum 18A). The fixture will begin an automatic homing process.



### Caution!

**Do not unplug motor harnesses while unit is powered.**

## SHOWBEAM 2.5 Onboard Menu System

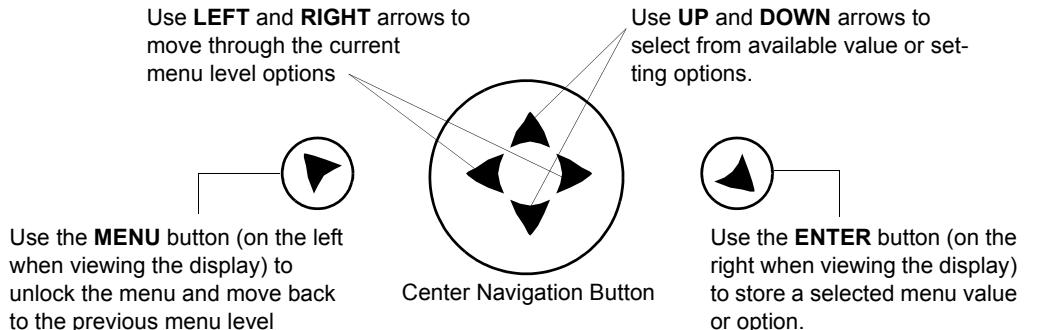

## Configuring Your SHOWBEAM 2.5 Fixture

To Set the Start Channel on an SHOWBEAM 2.5 fixture:

1. Unlock the menu system by pressing and holding down the MENU button until the extended 2-line display appears. The DMX ADDRESS menu is the first option at the top menu level.
2. Press the Enter button to select. The display will show SET DMX START CHANNEL###. The display will show the Start channel # currently assigned to the fixture.
3. Use the UP and DOWN arrows on the NAVIGATION button to select a new DMX start channel. The display will flash a new option ready for selection.
4. Press the ENTER button to accept the new DMX Start channel.

**Note that the SHOWBEAM 2.5 fixture uses a 32-channel range on a DMX link.**

## Getting Help

You can find SHOWBEAM 2.5 information online at [www.highend.com/support/](http://www.highend.com/support/) or contact High End Systems tech support by email at [support@highend.com](mailto:support@highend.com) or by phone at 1.800.890.8989.