




HIGH END SYSTEMS
an ETC. Company

SERVICE BULLETIN

Sola 1000 Head Cover

SolaSpot 1000 SolaSpot Pro 1000 SolaHyBeam 1000 SolaWash FX 1000

Due to interference with multiple injection molded features within the fixtures front bezel, a method has been defined to improve and ease the fitting of the head covers when re-installing them.

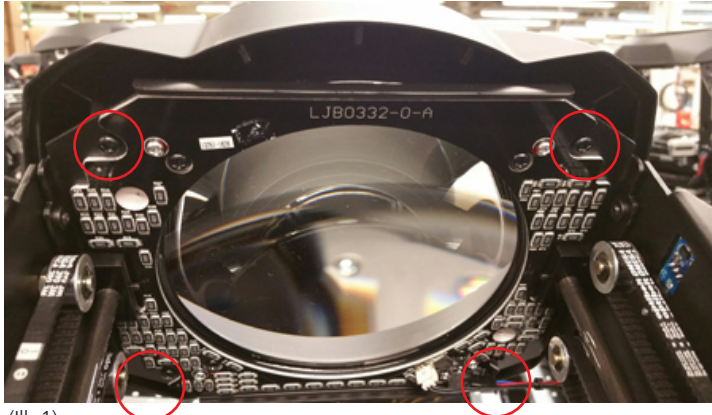

(Ill. 1)

2. Lay the front bezel on a flat surface. You will see fourteen (14) molded tab features inside the perimeter of the front bezel.
3. Using a small pair of sharp side cutters, cut all of the tabs off flush with the inner lip of the front bezel as shown in Illustrations 3 and 4.
4. After cutting all of the tabs, the front bezel can be re-mounted to the fixture head frame as shown in illustration 1.



(Ill. 3)



(Ill. 2)



(Ill. 4)

(Cont.)



HIGH END SYSTEMS
an ETC. Company

SERVICE BULLETIN

Sola 1000 Head Cover

SolaSpot 1000 SolaSpot Pro 1000 SolaHyBeam 1000 SolaWash FX 1000



CAUTION:



Wear proper eye protection.

5. There are unique support mounts designed for both SolaSpot 1000 / SolaSpot Pro 1000 and the SolaHybeam 1000 / SolaWash FX 1000 fixtures. Two (2) support mounts are used per fixture.



CAUTION:

Ensure that you have the proper mount for the fixture type that is being modified.

6. Locate, then loosen the two (2) philips head screws on the inside of the head frame near the front bezel. Allow enough room for a support mount to fit behind the screws.



(III. 6)

7. Slide the support mounts (one on each side of the fixture) into place until seated against the screws. Tighten the screws to secure the supports into place.
8. Replace head covers and test fit.



(III. 5)

- SolaSpot 1000 and SolaSpot Pro 1000 support mounts are marked Red.
- SolaHybeam 1000 and SolaWash FX 1000 support mounts are marked Blue.



(III. 7)

For further information or technical assistance, please contact customer service directly, or e-mail - support@highend.com

High End Systems
2105 Gracy Farms Lane
Austin, TX 78758 USA

Office and Customer Service: 512-836-2242
Fax: 512-837-5290
Toll Free: 800-890-8989